

Basic Manual



A5512CA
by CASIO

au by KDDI

Getting Ready

Making and
Answering Calls

Address Book

Pair Function

Teens Mode

Mail

Camera

EZweb

EZ Navi

Smart Mode

Inputting
Characters

Other
Functions

Troubleshooting
Remote Auto Lock

Index

Thank you for purchasing the A5512CA. Before using it for the first time, be sure to read the A5512CA Basic Manual (this PDF manual) so you know how to use it correctly. After you finish reading this manual, store it and the printed materials that come with the phone in a safe place for future reference.

The A5512CA comes with a Basic Manual and an Instruction Manual.

Equivalent to this English PDF manual.

The image shows the front cover of the A5512CA product. The cover is white with a large, abstract graphic of overlapping orange and yellow squares on the left side. On the right side, there is a vertical list of features in Chinese, each preceded by a small orange square icon. The text is as follows:

- 1. 日本
- 2. 超小型の設計
- 3. 低価格
- 4. 標準品
- 5. 標準品
- 6. 標準品
- 7. 標準品
- 8. 標準品
- 9. 標準品
- 10. 標準品
- 11. 標準品
- 12. 標準品
- 13. 標準品
- 14. 標準品
- 15. 標準品
- 16. 標準品
- 17. 標準品
- 18. 標準品
- 19. 標準品
- 20. 標準品
- 21. 標準品
- 22. 標準品
- 23. 標準品
- 24. 標準品
- 25. 標準品
- 26. 標準品
- 27. 標準品
- 28. 標準品
- 29. 標準品
- 30. 標準品
- 31. 標準品
- 32. 標準品
- 33. 標準品
- 34. 標準品
- 35. 標準品
- 36. 標準品
- 37. 標準品
- 38. 標準品
- 39. 標準品
- 40. 標準品
- 41. 標準品
- 42. 標準品
- 43. 標準品
- 44. 標準品
- 45. 標準品
- 46. 標準品
- 47. 標準品
- 48. 標準品
- 49. 標準品
- 50. 標準品
- 51. 標準品
- 52. 標準品
- 53. 標準品
- 54. 標準品
- 55. 標準品
- 56. 標準品
- 57. 標準品
- 58. 標準品
- 59. 標準品
- 60. 標準品
- 61. 標準品
- 62. 標準品
- 63. 標準品
- 64. 標準品
- 65. 標準品
- 66. 標準品
- 67. 標準品
- 68. 標準品
- 69. 標準品
- 70. 標準品
- 71. 標準品
- 72. 標準品
- 73. 標準品
- 74. 標準品
- 75. 標準品
- 76. 標準品
- 77. 標準品
- 78. 標準品
- 79. 標準品
- 80. 標準品
- 81. 標準品
- 82. 標準品
- 83. 標準品
- 84. 標準品
- 85. 標準品
- 86. 標準品
- 87. 標準品
- 88. 標準品
- 89. 標準品
- 90. 標準品
- 91. 標準品
- 92. 標準品
- 93. 標準品
- 94. 標準品
- 95. 標準品
- 96. 標準品
- 97. 標準品
- 98. 標準品
- 99. 標準品
- 100. 標準品

English version not available.

- To download the Basic Manual or Instruction Manual

- To access a keyword searchable au online manual (<http://www.au.kddi.com/manual/index.html>)

EZweb Access

→料金・申込・インフォ(Charges, Applications, and Info)
→auオンラインマニュアル(au Online Manual)



The typeface, fonts, and colors of the text on the example screens in this manual may differ from the screens that actually appear on the display of the phone. Also, certain icons and the scroll bars are not included on sample screens.

Cellphone Etiquette

Mind your manners!

A cellphone always emits weak radio waves while it is turned on. Enjoy operation of your cellphone without forgetting to be considerate of those around you.

■ Some locations do not allow the use of cellphones.

- Using a cellphone while driving is both dangerous and prohibited by Japanese law.
- Using a cellphone inside of an aircraft is prohibited by law. Be sure to turn off your cellphone before takeoff.



■ Watch out where you use your cellphone, and keep your voice down.

- Do not make calls from cinemas, theaters, museums, libraries, or other similar locations. Turn off the cellphone or use Manner Mode to ensure that the ring tone does not disturb others.
- When in public, move to a location where you will not be blocking traffic.
- On the Shinkansen, in a hotel lobby, or in other similar locations, move to a location where you will not disturb others.
- Take care to avoid talking on the phone in a loud voice.
- Before taking the picture of others, be sure to obtain their permission first.



■ Cellphone radio waves may interfere with electrical medical equipment.

- On a train or in other crowded locations, there is always the possibility that someone nearby may be wearing a pacemaker. Turn off your cellphone when you are in a crowded area.
- Follow the rules of hospitals and other medical facilities concerning the use or possession of cellphones.



Cellphone Basics

Features

Camera

Record photos and movies, and send them by e-mail.

▶ Page 58



EZ Navi

EZ Navi Walk, Position Search, and Area Message are all built-in.

▶ Page 78



Pair Function

Call or send mail to preset individuals quickly and easily.

▶ Page 44



Teens Mode

Limit the number of outgoing calls and mail messages, incoming spam, etc.

▶ Page 46

Smart Mode

Limit functions to those you most often use for simplified operation.

▶ Page 84

Hot Key

Select either Hot Dial or Hot Buzzer as the Hot Key function.

▶ Page 106



Mail

Send mail messages to other cellphones or to a computer.

▶ Page 48



EZweb

Download "Chaku-Uta®", wallpaper, and other data.

▶ Page 70

 


Manner Mode and Easy Voice Memo

Manner Mode

Use Manner Mode to turn off the ring tone so you do not bother others around you.




While the standby screen is displayed, hold down  for about one second.

▶ Page 35

Easy Voice Memo

 If you cannot answer a call, Easy Voice Memo plays an answering message and records the caller's message.



While the standby screen is displayed, hold down  for about one second.


▶ Page 36

Checking Power, Signal Strength, and Battery Level

Normally leave the phone turned on.




The phone needs to be turned on to make and receive calls.

Hold down  for at least 1.5 seconds to turn on the phone.

▶ Page 15

You cannot talk on the phone if it is unable to receive a signal.

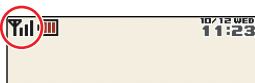


Signal strength is low in some areas, even if they are within the service area.


 indicates the current signal strength.

▶ Page 15

Keep an eye on the battery level.

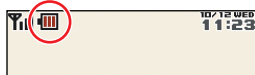

The phone may not function properly if battery power is low.

 
 indicates the current battery level.

▶ Page 15


Never use your cellphone while driving!

Holding a cellphone in your hand, talking on a cellphone, or looking at a cellphone display to send mail or to perform any other operation while driving is prohibited by law in Japan.

(Revised Traffic Control Law, effective November 1, 2004)

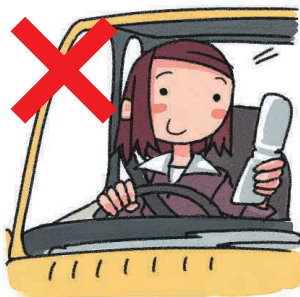

× Reading mail or looking at the display.


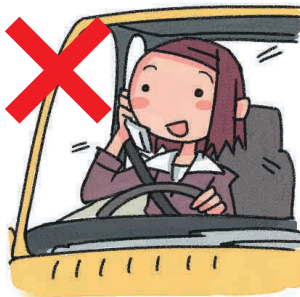



× Holding a cellphone in your hand to talk.

Turn off your cellphone or enter Drive Mode while driving.

Drive Mode

  In Drive Mode, the phone will play the message “ただいま車を運転しています。・・・” (I am driving right now...), and then ask the caller to leave a message using Easy Voice Memo.

While the standby screen is on the display, press  (Mute), and then press  (ON). Next, press  (Drive Mode) to enter Drive Mode.



Beware of spam and one-ring calls!

How to Combat Spam

You can set up mail filters to block specific mail or mail identified as “未承諾広告※” (unsolicited advertisement), which often includes a lot of spam.

Your cellphone has the following filters for blocking spam.


- ・未承諾広告フィルター (unsolicited advertisement filter)
- ・アドレスフィルター (address filters)
 - －指定拒否設定 (blocks specific mail)
 - －指定受信設定 (receives specific mail)




▶ Page 55

Beware of one-ring calls!

A “one-ring call” (wan-giri in Japanese) rings your phone only once, in an attempt to make you call back to a service that automatically bills you very high charges.

The red  icon at the head of an incoming record indicates that the call rang for only four seconds or less. This indicates a possible “one-ring call.”

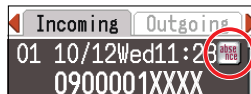

▶ Page 31

Disaster Message Board Service

Disaster Message Board

The Disaster Message Board lets you use EZweb to register information about your well-being in case of a major disaster. The information you register can be accessed from anywhere in Japan over EZweb or the Internet.

Registering Disaster Message Board Information

- When a major disaster strikes, you can use your au cellphone to access the “災害用伝言板” (Disaster Message Board) on EZweb and register your current condition, comments, and other information about your well-being.
- After you register information, it can be sent by mail to family, friends, and other individuals you have registered as a recipient of your Disaster Message Board information.

Accessing Disaster Message Board Information

- Disaster Message Board information can be accessed by inputting the phone number of an individual over EZweb or the Internet.*

* Disaster Message Board information can be accessed from another type of cellphone (excluding TU-KA), PHS, or computer at <http://dengon.ezweb.ne.jp/>.

Disaster Message Board Access

EZ ▶▶▶ Top Menu ▶▶▶ 災害用伝言板
(Disaster Message Board)

<http://dengon.ezweb.ne.jp/>



Disaster Message Board Top Screen

災害用伝言板
伝言板トップ
～サービス提供中～ 安否情報の登録・確認が できます。
登録 確認 削除 お知らせメール設定
サービス概要
ご利用地域情報
お問合せ
English
(C)KDDI/TU-KA Group
Select BrowserMenu

Registration

Information Registration Screen

災害用伝言板
～登録～
被災状況 <input type="checkbox"/> 無事です。 <input type="checkbox"/> 被害があります。 <input type="checkbox"/> 自宅に居ます。 <input type="checkbox"/> 避難所に居ます。 <input type="checkbox"/> コメント見て
コメント入力 (全角100文 字まで)
※登録内容確認画面にて 、お客様の携帯電話番号 および登録日時が表示さ れます。
登録
伝言板トップへ
(C)KDDI/TU-KA Group
Select BrowserMenu

Information Screen

災害用伝言板
～確認～
安否情報を確認したい相 手のau/ソーカー携帯電話 番号を入力して下さい。
090xxxxxxxx
検索する
伝言板トップへ
(C)KDDI/TU-KA Group
Select BrowserMenu

Access

- Registration contents are retained for up to 72 hours.
- You can register up to 10 entries per phone number. Registering a new entry while there are already 10 registered overwrites the oldest current entry with the new one.
- You can view a Disaster Message Board demonstration at:
EZ→Top Menu→料金・申込・インフォ → 災害用伝言板 (デモ版)
(Charges, Applications, and Info) (Disaster Message Board (Demo))
- To view the Disaster Message Board in English, select the “English” option on the Disaster Message Board top screen.

Contents

Cellphone Etiquette 1

Mind your manners! 1

Cellphone Basics 2

Features 2

Manner Mode and Easy Voice Memo 3

Checking Power, Signal Strength, and Battery Level 3

Never use your cellphone while driving! 4

Turn off your cellphone or enter Drive Mode while driving. 4

Beware of spam and one-ring calls! 5

Disaster Message Board Service 6

Contents 8

Getting Ready 10

Do you have everything? 10

Names of Parts 11

Charging the Battery Pack 12

Directly Connecting the Separately Available General-purpose 01 AC Adaptor
for Charging 14

Turning On Power 15

Turning Off Power 15

A5512CA Initial Settings 16

Operation Basics 17

Display Indicators 18

Main Menu 19

Initializing E-mail and EZweb 21

Selecting English as the Display Language 22

Looking Up Your Current Phone Number and E-mail Address 23

Changing Your E-mail Address 24

Changing the Display Character Size 26

Personal Identification Numbers and Passwords 27

Making and Answering Calls 28

Making a Call 28

Answering a Call 29

Redialing (Outgoing Records/Incoming Records) 30

One-ring Calls 31

Changing the Ring Tone 32

Adjusting the Ring Tone Volume 34

Adjusting the Earpiece Volume during a Call 35

Turning On Manner Mode 35

Turning On Easy Voice Memo 36

Playing an Easy Voice Memo 37

Address Book 38

Creating a New Address Book Record 38

Editing an Address Book Record 40

Adding Outgoing or Incoming Record Data to the Address Book 42

Dialing from the Address Book 43

Pair Function 44

Registering a Pair Partner 44

Making a Phone Call or Sending Mail to a Pair Partner 45

Teens Mode	46
Using Teens Mode	46
Turning on Teens Mode	47
Mail	48
Using E-mail	48
Using C-mail	49
C-mail Security	49
Creating and Sending E-mail Messages	50
Reading Received E-mail Messages	52
Reading an E-mail Message with an Attached Photo or Movie	53
Replying to a Received E-mail Message	54
Avoiding Spam	55
Creating and Sending C-mail Messages	56
Reading Received C-mail Messages	57
Camera Features	58
Camera	60
Shooting a Photo	60
Viewing Photos	62
Recording a Movie	64
Viewing Movies	66
Attaching a Photo or Movie to an E-mail Message	68
Using Photo Mail	69
EZweb	70
Using EZweb	70
Displaying the EZ Top Menu	71
Viewing a Site	72
Bookmarking Sites You Frequently Access	73
Downloading Chaku-Uta®	74
Viewing a Bookmarked Site	76
Checking Charges	77
EZ Navi Features	78
EZ Navi Walk Menu	80
Registering Your Home Location	80
Return Home	83
Smart Mode	84
Entering Smart Mode	84
Exiting Smart Mode	85
Using the Smart Mode Main Menu	86
Adding Data to the Address Book in Smart Mode	88
Using the Address Book in Smart Mode	91
Creating and Sending E-mail Messages in Smart Mode	92
Shooting a Photo in the Smart Mode	95
Viewing Photos in the Smart Mode	96
Inputting Characters	98
Inputting an E-mail Address	99
Pictographs and Preset Phrases	100
Other Functions	102
Troubleshooting	103
If you lose your A5512CA	104
Hot Key	106
Extension Mode	107
Index	108

Getting Ready

Before using the A5512CA for the first check the contents of the box it comes in. You should also familiarize yourself with basic operations, like how to charge the battery, how to turn on power, etc.



Do you have everything?


- A5512CA



- Battery pack (5512UAA)



- Desktop holder (5512PUA)

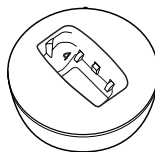

- Extracted contract clauses (Japanese)

- Warranty (Japanese)

- Operating Precautions (Japanese)

- Basic Manual (Japanese)



- Instruction Manual (Japanese)




Note


An AC adaptor is not included. It is up to you to purchase a general-purpose 01 AC adaptor.

Names of Parts

Front

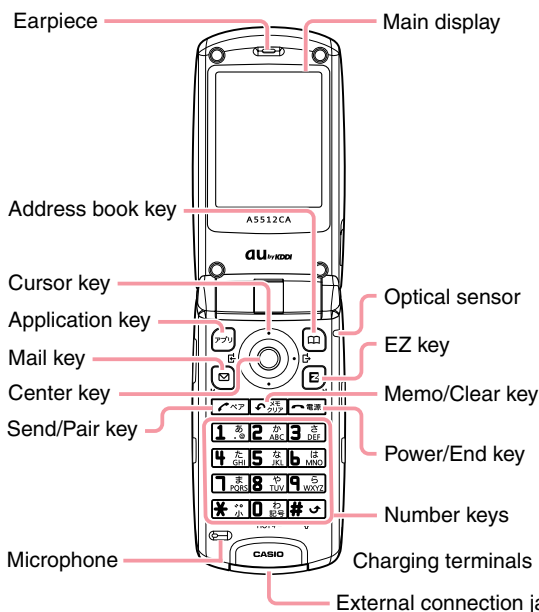


Back

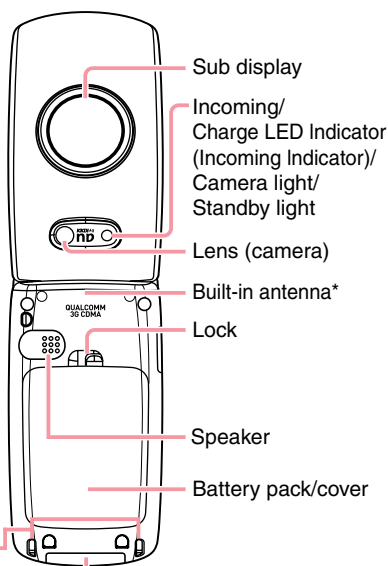




* Take care to avoid covering the built-in antenna with your hand when using the phone, using EZweb, and when accessing GPS information.

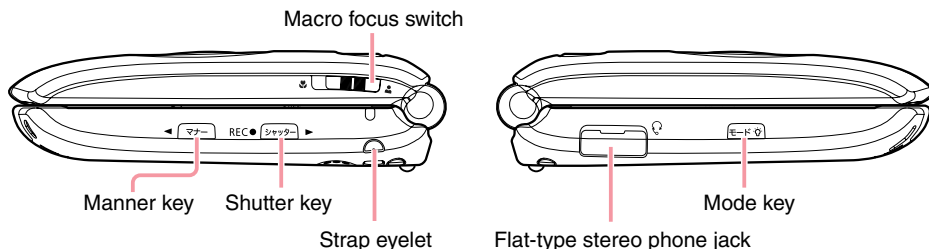Side



Charging the Battery Pack

The battery pack that comes with the phone is not charged when you purchase it. Be sure to charge the battery pack before using the A5512CA for the first time. Charging takes about 120 minutes. You should re-charge the battery pack whenever the battery level icon shows  or .

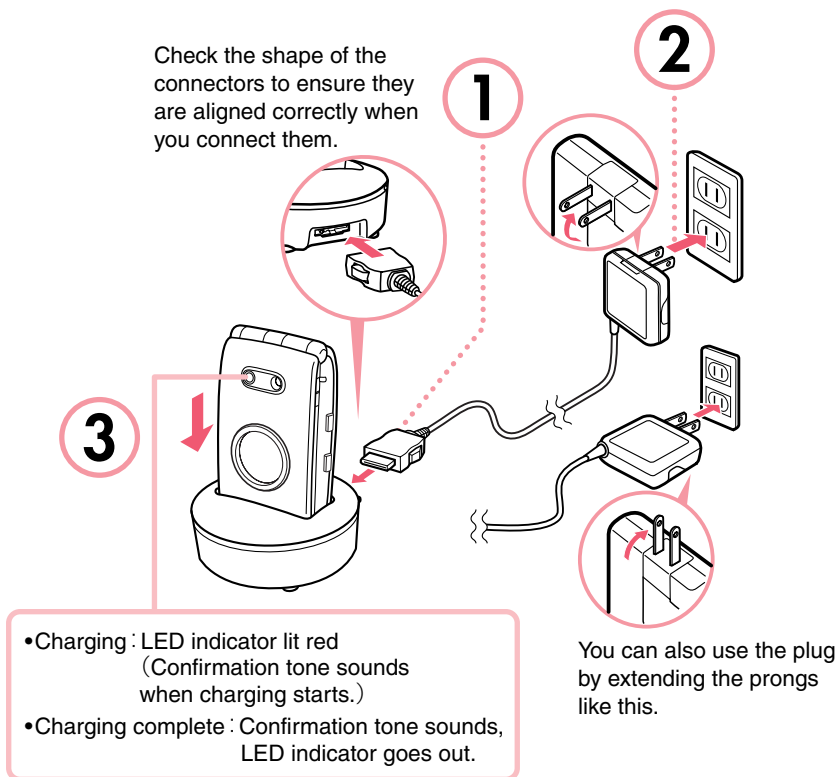

Important!

- You must purchase a separately available general-purpose 01 AC adaptor for charging. Note that the configuration of the AC adaptor may be different from that shown in the illustration above.
- Orient the connector of the separately available general-purpose 01 AC adaptor so it is parallel to the desktop holder connector terminal when you connect them.





1 **Connect the separately available general-purpose 01 AC adaptor to the desktop holder.**


Check the shape of the connectors to ensure they are aligned correctly before you connect.

Trying to force a connection can damage the connectors.

2 **Plug the separately available general-purpose 01 AC adaptor power plug into a 100V AC outlet.**

3 **Insert the A5512CA into the desktop holder.**


This will cause the A5512CA charge LED indicator to light red, and the battery level icon to cycle through the following pattern:  →  →  → .

When charging is complete, the battery level icon will show  and the LED indicator (incoming indicator) will go out.

To remove the A5512CA from the desktop holder, lift it straight up.

Directly Connecting the Separately Available General-purpose 01 AC Adaptor for Charging

You can connect the separately available general-purpose 01 AC adaptor to the A5512CA to charge the battery pack.

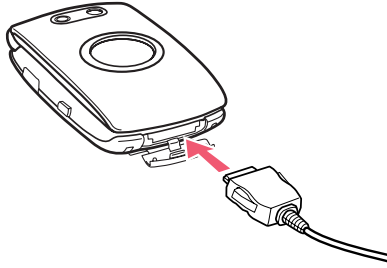

Check the shape of the connectors to ensure they are aligned correctly when you connect.



Important!


Orient the connector of the separately available general-purpose 01 AC adaptor so it is parallel to the A5512CA external connection jack when you connect them.

Turning On Power

1 Hold down  for at least 1.5 seconds.





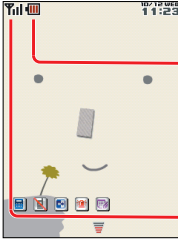







2











Standby screen

The standby screen will appear on the display.

Indicator						
Battery Level	High	Low	Very Low	Dead	Fully Charged	Extension Mode*

- During charging, the battery level icon will cycle through the following pattern:  →  →  → .

Indicator						
Signal Strength	Strong	Medium	Weak	Very Weak	Out of Range	Emission OFF Mode

- Communication is not possible while the signal strength indicator is  (Out of Range).
- Communication may not be possible while the signal strength indicator is  (Very Weak).

*Using Extension Mode

Extension Mode automatically turns off signal emission and limits functions you can use when the battery pack level goes low. It keeps the A5512CA operating longer when you are unable to recharge the battery pack right away.

Turning Off Power

1 Hold down  for about 1 second.





A5512CA Initial Settings

Pressing ● the first time the standby screen is displayed will display the initial menu first.

The following steps show only how to display and exit the initial menu, which will configure the initial factory default settings described below. You can change each of the initial settings later, if you want.

- 1
- While the standby screen is displayed, press ●.

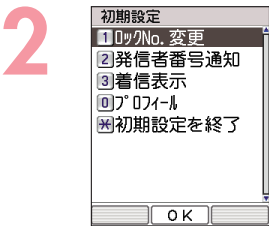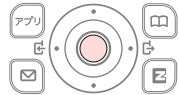

Press *小 (初期設定を終了)
(Quit Initialization).

The main menu will appear on the display (page 19).




Note

The table below shows the initial factory default setup of the A5512CA. Quitting initialization as shown in the above procedure will configure the setting shown below.


Lock No.	1234
Teens Lock No.	1234
Caller ID	On
Incoming Display	On
Profile	Blank

Operation Basics

■ Key functions

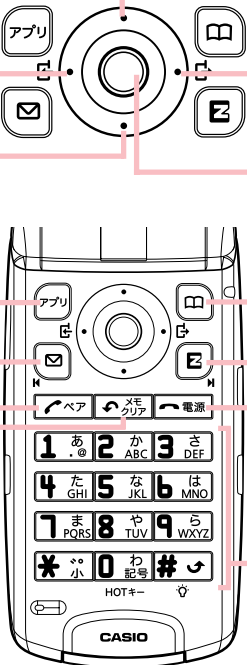 



 


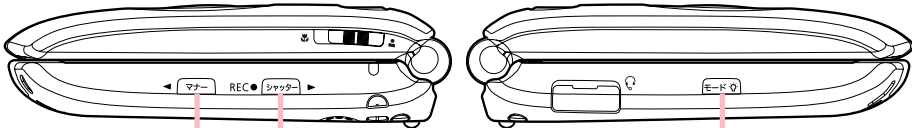
- Displays incoming records.
- Returns to the previous menu screen.
- Displays the standby shortcut icon.
- Selects an item.
- Displays the EZ apps menu.
- E-mail
- C-mail (Hold down for about one second).
- Displays the previous data.
- Dials/answers a phone call.
- Displays the Pair function.
- Memo
- Toggles Easy Voice Memo on and off (hold down for about one second).
- Deletes a character.
- Returns to the previous menu screen.
- Selects an item.
- Displays outgoing records.
- Scrolls forward one menu screen.
- Displays the main menu.
- Applies an item.
- Displays the address book.
- Creates a new address book (hold down for about one second).
- Displays the EZ menu.
- Displays the next data.
- Toggles power on and off.
- Hangs up.
- Terminates a function.
- Returns to the standby screen.
- Phone number input keys
- Text character input keys.




- Toggles Manner Mode on and off (hold down for about one second).
- Shutter release
- Shoots a photo (when held down for about one second, only while the phone is unfolded).
- Switches the clock function (only while the phone is folded).

Note


- If you lose track of where you are or if you make a mistake Press  to scroll back to the previous screen. Press  to return to the standby screen.
- When  is in the lower right corner of the photo or movie screen, pressing  will display key help.
- Holding down  for about one second while the standby screen is displayed toggles the Hot Key function on and off.
- Holding down  for about one second toggles side key disable on and off. To turn off side key disable, unfold the phone.

Display Indicators

The following explains the main icons that appear on the standby screen.

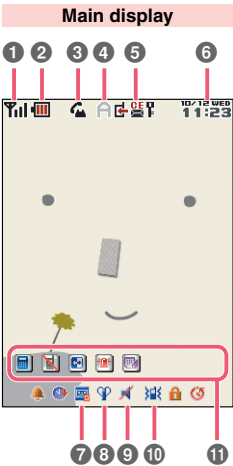


	This indicator:	Indicates this:
①		Signal strength
②		Battery level
③		Phone is off hook
④		Suspended EZ apps (BREW®)
⑤		Unread mail
⑥		Current time The date and time are set automatically in accordance with standard time information included in the received radio wave.
⑦		Easy Voice Memo setting in progress
⑧		Manner Mode setting in progress
⑨		Ring tone off
⑩		Vibrator on
⑪		Selection of calculator, Emission Off Mode, mode setting, Extension Mode, Note Pad 01, or other user icons by pressing and then

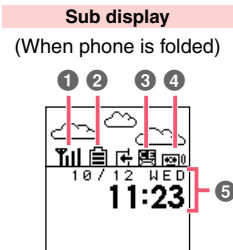





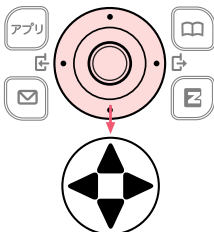 






①		Signal strength
②		Battery level
③		Unread mail
④		Easy Voice Memo setting in progress
⑤		Current time The date and time are set automatically in accordance with standard time information included in the received radio wave.




■ Key symbols used in this manual




The cursor key is represented in this manual using the key symbols described below.

	or		key:					
	or		key:					
	,		,		or		key:	


Main Menu

Pressing  while the standby screen is displayed displays the main menu. Use  to select the icon you want, and then press  (OK) to access the function associated with the icon.

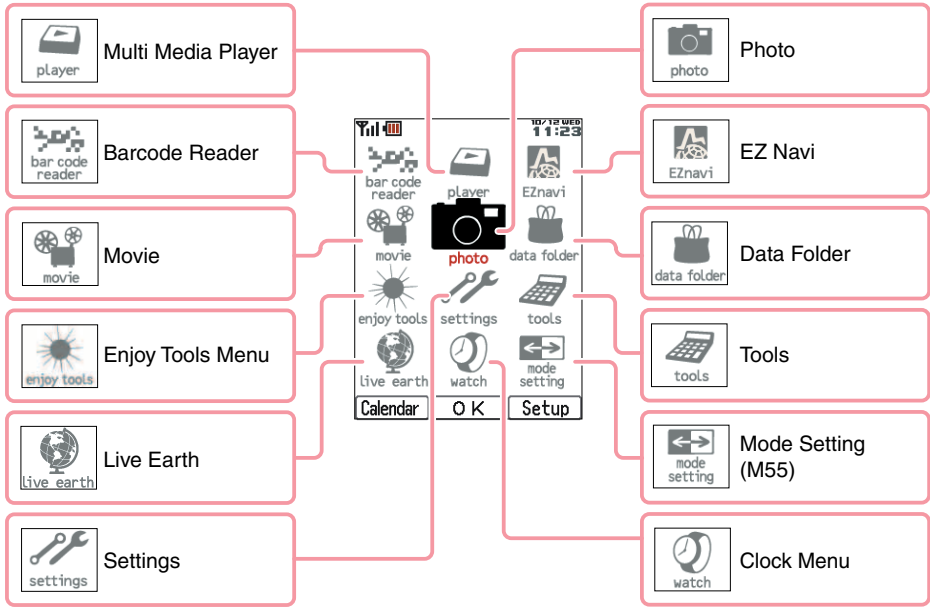


Using the Main Menu

Example: To display the setting screen from the main menu.

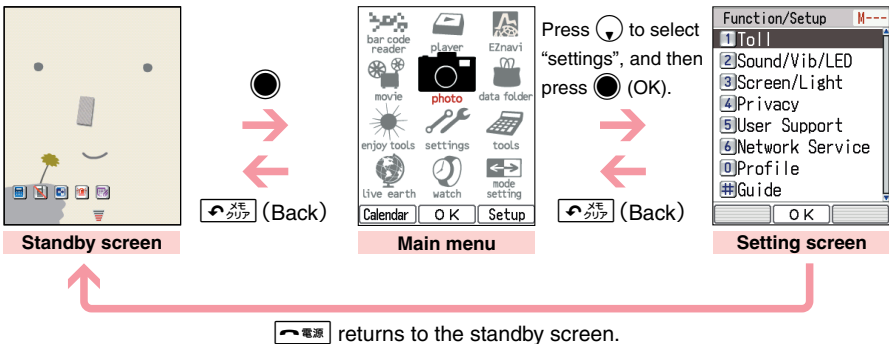

■ Using Soft Keys

Soft keys are the keys you use to execute the functions along the bottom of the screen. The table below explains the relationship between the soft keys and the on-screen functions. Note that the function of each soft key depends on the currently displayed screen.

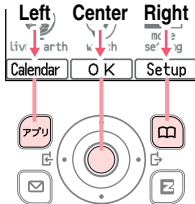


Left soft key	Executes the function on the left.
Center soft key	Executes the function in the center.
Right soft key	Executes the function on the right.

■ Using Menus

Pressing the soft key that corresponds to the “Menu” at the bottom of the display will display a menu of various operations related to the function you are currently using.

Example: To display the photo monitor menu from the photo monitor screen.

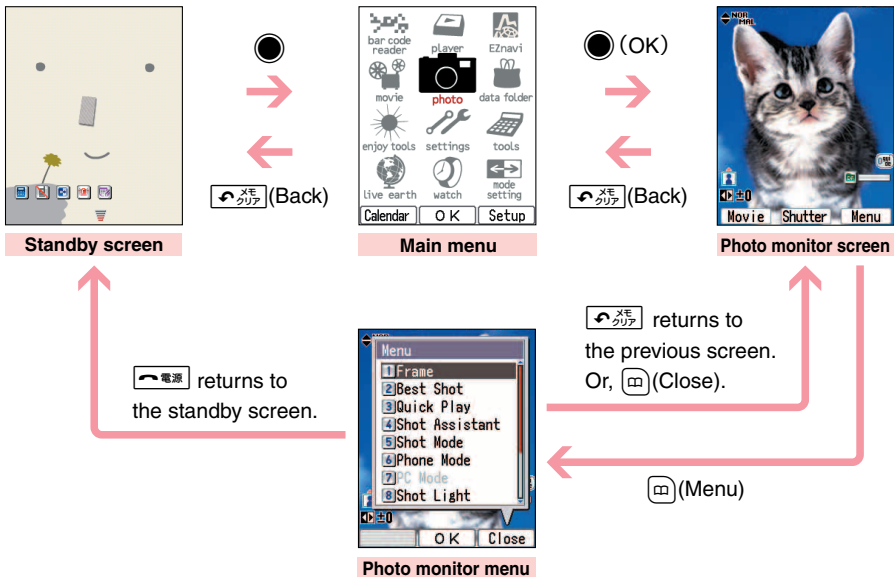

Initializing E-mail and EZweb

An EZweb subscription is required to use e-mail and EZweb. If you did not apply when you purchased your phone, contact your nearest au shop or the au Customer Service Center.

- You will be assigned an e-mail address automatically when you perform the EZweb initialization procedure. See “Changing Your E-mail Address” on page 24 for information about how to change your e-mail address.

1 While the standby screen is displayed, press [E-mail], [EZweb], or [Apps].



2

EZwebを利用するための初期設定を行います。
OKを押してしばらくお待ちください。

OK

Press [OK].

Wait until the phone connects to the server for initialization.




3

ようこそEZwebへ
お客様のEメールアドレスは、
XXXXXXXXXX@ezweb.ne.jp
です。


-ヒント-
Eメールアドレスの変更は「OK」
押下後にEメールメニュー→Eメール
設定→その他の設定にて
行ってください。


OK [Eメールメニュー]

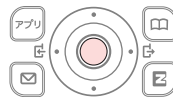

After your automatically assigned e-mail address appears, press [OK].




 Selecting English as the Display Language

- 1** While the standby screen is displayed, press .



- Use  to select “機能設定” (Settings), and then press .

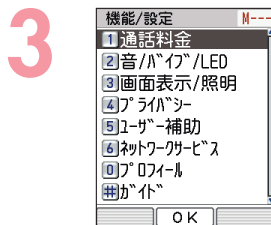

- Press  (画面表示/照明) (Screen/Light), and then  (Set Language).



- Press  (English).

This selects English as the display language.



Important!

- Even if English is selected as the display language, schedule and other dates are displayed in the format year/month/day. Folder names inside of the data folder are also displayed in year/month/day sequence.

Looking Up Your Current Phone Number and E-mail Address




Getting Ready


1 While the standby screen is displayed, press **OK**.



Use **Up** to select “settings,” and then press **OK** (OK).

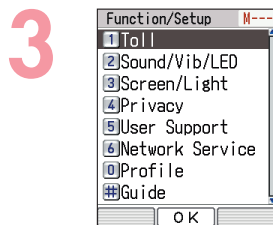

Press **0** **わ 記号** (Profile).

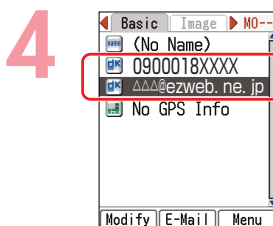



Your current phone number and e-mail address will appear on the display.



Note

You can also look up your phone number and e-mail address by pressing **OK** and then **0** **わ 記号** while the standby screen is displayed.


Changing Your E-mail Address

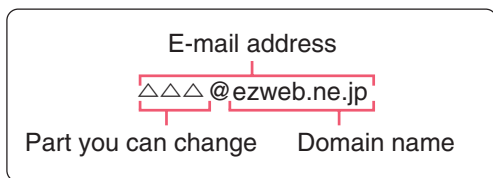

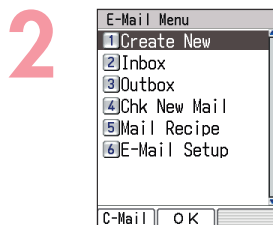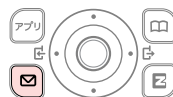

1 While the standby screen is displayed, press .

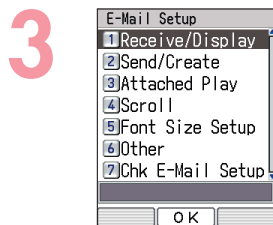



Press **b**  **は MNO** (E-Mail Setup).



Press **b**  **は MNO** (Other).

 
When the EZweb connection confirmation screen appears, press **1**  **あ** (Yes).

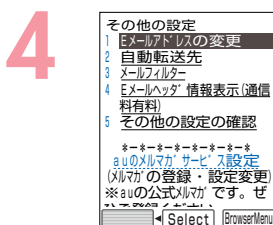

Press **1**  **あ** (Eメールアドレスの変更) (Change E-mail Address).




5

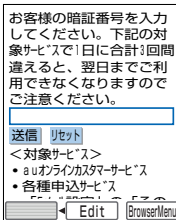


Enter your PIN, press ● (OK), use ⬆ to select “送信” (Send), and then press ● (Select). Use ⬇ to select “承諾する” (Accept), and then press ● (Select).

Your PIN is the 4-digit number you entered on your subscription contract.

If the wrong PIN is entered three times in one day, the setting operation will be disabled until the following day.

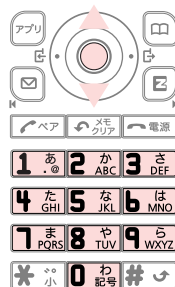

6

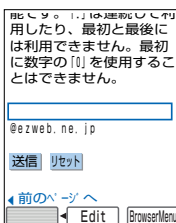


Use ⬆ to scroll the screen and select the text box.

Press ● (Edit), enter the e-mail address you want, and then press ● (OK).

To input an e-mail address
→ “Inputting an E-mail Address”
(page 99)



7

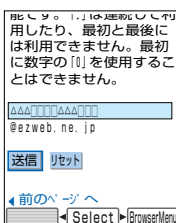


Use ⬆ to select “送信” (Send), and then press ● (Select).

If your e-mail address won't change:

- The new e-mail address you input may be registered by someone else already. Try entering a different address.
- The address you input may contain characters that are not allowed in an e-mail address. Input the address using allowed characters.



8

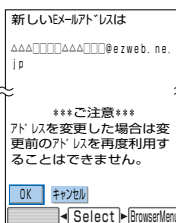


When the e-mail address confirmation screen appears, press ⬇ to select “OK,” and then press ● (Select).


The message “正常に変更されました。” (Update is complete.) will appear to indicate that your e-mail address was changed.




Changing the Display Character Size



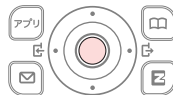


1 While the standby screen is displayed, press .



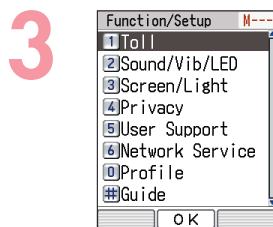

Use  to select “settings,” and then press  (OK).



Press  (Screen/Light),
 (Font Size), and then
 (Batch Setup).



Use  to select the character size you want, and then press  (OK).



Note

- The initial default character size setting is “Middle.”
- You can specify a character size for each function.

Personal Identification Numbers and Passwords

The A5512CA lets you use the numbers and passwords described below. Be sure to take steps so you do not forget your numbers and passwords, because you will need them to perform various operations and to access subscription services.

Personal Identification Number (PIN)

Usage Examples	For remote operation of the Voice Mail and Call Transfer from a standard phone
	For inquiries, applications, and service modifications using au Customer Service Center voice guidance, au website, and EZweb
	For changing e-mail settings
Initial Default	4-digit number you entered on your subscription contract

Lock No.

Usage Examples	For modifying various phone settings
Initial Default	1234 (four digits)

Teens Lock No.

Usage Examples	For modifying various phone settings in Teens Mode
Initial Default	1234 (four digits)

EZ Password

Usage Examples	For entering and canceling subscriptions for EZweb fee-based content
Initial Default	4-digit number you registered for your first fee-based content subscription

Premium EZ Password

Usage Examples	For entering and canceling subscriptions for EZweb fee-based contents paid for using “まとめてau支払い” (combined au payment service)
	For purchasing products from EZweb sites that use “まとめてau支払い” (combined au payment service)
Initial Default	4 to 8-digit number you registered for your first “まとめてau支払い” (combined au payment service) payment

Making and Answering Calls




Making a Call


 
- While the standby screen is displayed, use the number keys (0 わ 記号 to 9 ら WXYZ) of the keypad to enter the phone number you want to call.

When calling a standard phone, you also need to enter the area code.



- Press .

After you finish a call, press  to hang up.

You can also make a call by inputting the phone number, and then pressing  (Call). On the phone number menu that appears, press  (Call), and then make the call.



Send Methods


Call : Your phone number is provided to the party you are calling in accordance with the caller ID setting of that party's phone.

184 Add: Your phone number is not provided to the party you are calling.

186 Add: Your phone number is provided to the party you are calling.

Answering a Call


1 Press  to answer an incoming call.

After you finish a call, press  to hang up.




Note

Display for Incoming Calls

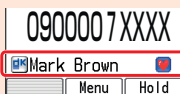

If the caller's name is your address book, it appears on the display.
If not, only the caller's phone number is displayed.

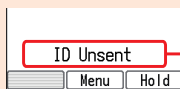


A message like this appears when the phone number of the caller is not provided for some reason.


 
ID Unsent : The caller's phone refused to send its phone number.

Pay Phone : The call is from a pay phone.

Not Support: The call is from a phone that does not support caller ID.

Missed Call Notification

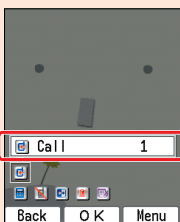

The message " Call X" will be on the display if you did not answer one or more calls.
Press  (OK) to check incoming records (caller phone number, etc.)

To redial a number
→ "Redialing (Outgoing Records/Incoming Records)"
(page 30)


Redialing (Outgoing Records/Incoming Records)




1 While the standby screen is displayed, press or .

: Displays outgoing records.

: Displays incoming records.

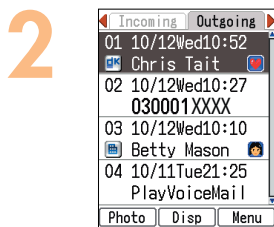

Use to select the record whose number you want to dial.

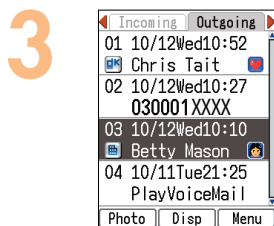

Press .



Note


The phone stores up to 50 records each for the outgoing records and incoming records. When a record is created while there are already 50 records in memory, the oldest current record is deleted automatically to make room for the new one.



One-ring Calls

■ What is a “one-ring call”?

A “one-ring call” is an incoming call that rings your phone only once, which causes it to be stored in your incoming records. If you redial the number shown in your incoming records, often you are connected to a dating service or some other service that may charge you very high rates. Always keep in mind that it is a good idea to avoid calling back unfamiliar numbers.

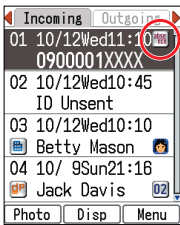
■ One-ring call indicator



The  indicator indicates an incoming call you did not answer. The red  indicator indicates an incoming call that rang for four seconds or less. There is a good chance that such a call is a one-ring call.


Changing the Ring Tone




1 While the standby screen is displayed, press .



Use  to select “settings,” and then press  (OK).

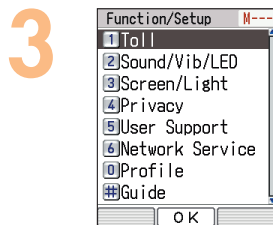

Press **2**  (Sound/Vib/LED).

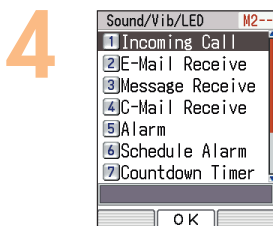

Press **1**  (Incoming Call).




5



Press **2** か ABC (Melody).




6

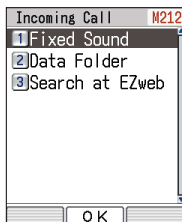

Press **1** あ .@ (Fixed Sound).



7

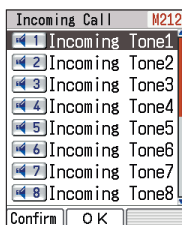

Use **↑** to select the ring tone you want, and then press **●** (OK).



To hear the currently selected ring tone, press **アプリ** (Confirm) before pressing **●** (OK).

Note


- The initial default ring tone setting is “Incoming Tone1”.
- You can also download a “Chaku-Uta®” from the Internet and use it for your ring tone.
→ “Downloading Chaku-Uta®” (page 74)

Adjusting the Ring Tone Volume

To adjust the ring tone volume, perform steps 1 through 3 under “Changing the Ring Tone” (page 32), and then continue with the following steps.



1

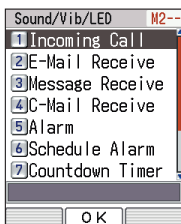

Press **1** **あ** (Incoming Call).



2



Press **1** **あ** (Volume).



3



Use **⬆** to adjust the ring tone volume, and then press **●** (OK).



⬆: Increases volume.

⬇: Decreases volume.

To hear the ring tone at the current volume setting, press **⏮** (Play) before pressing **●** (OK).

Note

Step-up : Ring tone gradually increases in volume.

Step-down: Ring tone gradually decreases in volume.

Mute : Ring tone does not sound.


To display the “Step-up” and “Step-down” settings, select volume level 5 and then press **⬆**.

To display the “Mute” setting, select volume level 1 and then press **⬇**.

Adjusting the Earpiece Volume during a Call



1

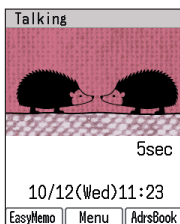

During a call, use to adjust the volume.

: Increases volume.

: Decreases volume.



There are five volume levels for the earpiece volume.

2



The display shows the current volume setting.


Turning On Manner Mode

While Manner Mode is turned on, the phone alerts you to incoming calls by vibrating.




1

While the standby screen is displayed, hold down for about one second.

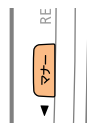

2

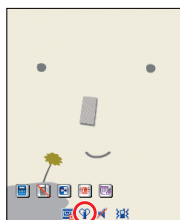

The phone will enter Manner Mode.

The indicator is on the display while Manner Mode is turned on.

Turning on Manner Mode also turns on Easy Voice Memo, which is indicated by on the display.

While Manner Mode is turned on, the phone vibrates without sounding its ring tone.

To exit Manner Mode, hold down for about one second again.


Turning On Easy Voice Memo




1 While the standby screen is displayed, hold down  for about one second.


ベア	メモ クリア	電源
1 あ . 0	2 か ABC	3 さ DEF
4 た GHI	5 な JKL	6 は MNO
7 ま PQRS	8 や TUV	9 ら WXYZ
* 小	0 わ 記号	#

2

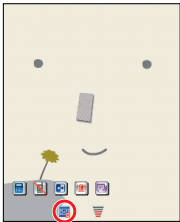

This turns on Easy Voice Memo.

To turn off Easy Voice Memo, hold down  for about one second again.

The  indicator is on the display while Easy Voice Memo is turned on.

The phone can have up to four Easy Voice Memos recorded, and each memo can be up to 15 seconds long.

If a new Easy Voice Memo is recorded when there are already four in memory, the oldest, unprotected memo that has already been played back is deleted automatically to make room for the new one. Protected Easy Voice Memos are not deleted.

Using the Voice Mail


The Voice Mail can be used to answer the phone and take messages when the phone is turned off, or when you are in a location where signal reception is not possible.

Playing an Easy Voice Memo

The message “ Call” and “ Easy V Memo” appear on the standby screen when there is one or more Easy Voice Memos recorded.




1

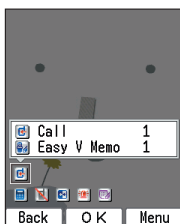

Select “ Call,” and then press **OK** to display the incoming records list.




2

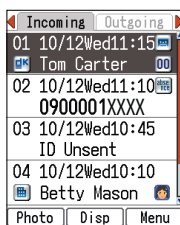


Use **Up** to select the record with the icon, and then press **Disp** to display the incoming record detail screen.



3

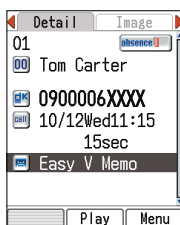

Use **Up** to select “Easy V Memo” and then press **Play** to play back the memo.

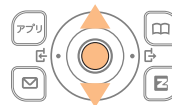

Note

To delete an Easy Voice Memo, press **4** **た** **2** **か** while the standby screen is displayed. Select the Easy Voice Memo you want to delete, press **Menu** and then **1** **あ** (Delete). Next press **1** **あ** (Delete One), and then press **1** **あ** (Yes).

Address Book




Creating a New Address Book Record

- 1 While the standby screen is displayed, hold down  for about one second.



2

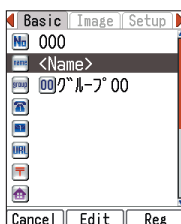


- 2 Select " <Name>," and then press  (Edit).



3




- 3 Enter the name and then press  (OK).



- 3 To input text
→ Inputting Characters (page 98)

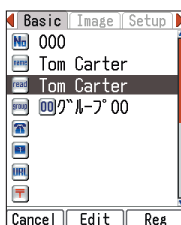

4



- 4 Check the  (Reading) entry for the name you input.


The reading is generated automatically when you input a name.

5

- 5 Use  to select " <Phone Number1>," and then press  (Edit).



6

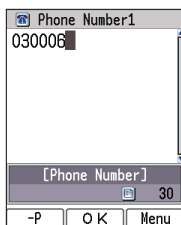


Enter the phone number, and then press **OK**.

When entering the number of a standard phone, be sure to include the area code.



7

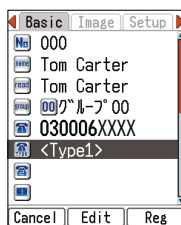

Use **↓** to select “**<E-Mail Adrs1>**,” and then press **Edit**.

If you do not want to enter an e-mail address, jump to step 9.



8




Enter the e-mail address, and then press **OK**.

To input an e-mail address
→ “Inputting an E-mail Address”
(page 99)



9

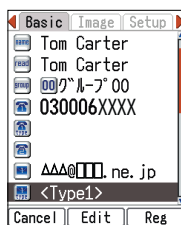

Press **Reg** to store the record.



Note


- The address book can contain up to 700 records.
- Address book records are numbered from 000 through 699. Registering a new record automatically assigns it the lowest available unused record number.
- An address book record can also contain a website URL, street address, birthday, and other personal information.



Editing an Address Book Record




Example: To edit the phone number of “Tom Carter”

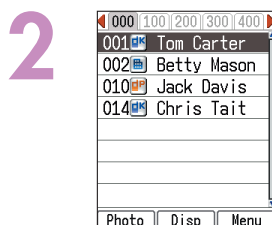
- While the standby screen is displayed, press .



- Use  to select the record you want to edit, and then press  (Menu).

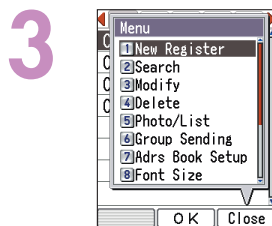


- Press  (Modify).

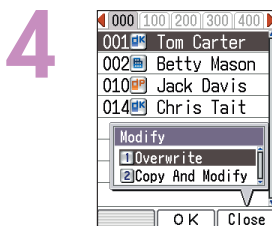

- Press  (Overwrite).




5

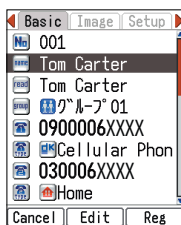

Use to select
 “ 0900006XXXX”, and then
 press (Edit).



6

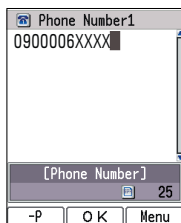

Make the changes you want,
 and then press (OK).

To delete characters, press .



7

Press (Reg).



Adding Outgoing or Incoming Record Data to the Address Book




1 While the standby screen is displayed, press ◀ or ▶, use ⬇ to select the phone number you want to save, and then press (Menu).



- ▶: Displays outgoing records.
- ◀: Displays incoming records.

2

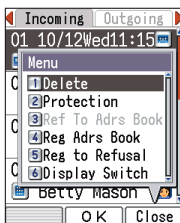

Press (Reg Adrs Book).




3



Press (New Reg).



4

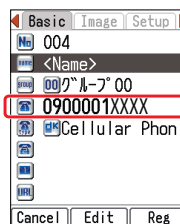


The address book editing screen will appear, with the phone number of the selected record input automatically.

To enter the name, use the procedure starting from step 2 under “Creating a New Address Book Record” (page 38).


Dialing from the Address Book



- While the standby screen is displayed, press and then use to select the record whose phone number you want to dial.

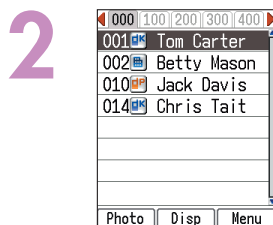

- Press (Disp) to display the details of the record.

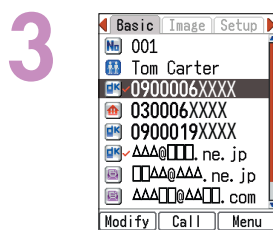

- Use to select the phone number, and then press (Call).



Pair Function



Once you register a person as a “Pair partner,” you can make a call to that person or send that person e-mail using a simplified operation. Up to five persons can be registered as Pair partners.

Registering a Pair Partner

In order to register a person as a Pair partner, that person’s names, phone number, and other information needs to be in the address book already. Use the procedure under “Creating a New Address Book Record” (page 38) to create the required record before trying to register a person as a Pair partner.

- While the standby screen is displayed, press .




In response to the confirmation screen that appears, press (OK).




- Use to select “Register • Confirm,” and then press (OK).




Use to select the 1 through 5 tab where you want to register the Pair partner.

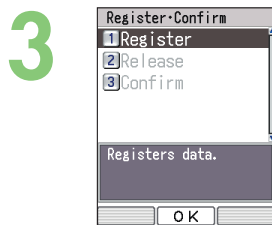

- Press (Register).

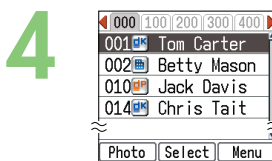

- Use to select the address book record for the person you want to register as a Pair partner, and then press (Select).

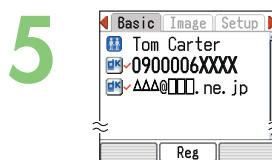


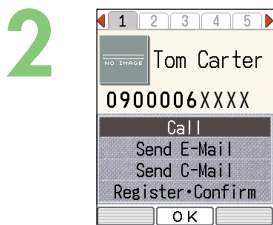
- Press (Reg).




Making a Phone Call or Sending Mail to a Pair Partner



1 While the standby screen is displayed, press .

 



Use  to select the Pair partner.



Use  to select “Call”, and then press  (OK).



Selecting “Send E-Mail” and then pressing  (OK) will display a screen for composing and sending an e-mail message. Next, continue from step 5 of the procedure under “Creating and Sending E-mail Messages” (page 50).

Selecting “Send C-Mail” and then pressing  (OK), will display a screen for composing and sending a C-mail message. Next, continue from step 5 of the procedure under “Creating and Sending C-mail Messages” (page 56).

Teens Mode

Teens Mode can be used to block spam, and to block inadvertent access to phone numbers and URLs included inside of mail messages. Teens Mode can also be used to restrict call time and the number of mail sends.



Using Teens Mode

- **Teens Mode can be used to restrict mail reception and display contents.**

When the sender is a Pair partner	Receipt is allowed.
When the sender is included in the address book	Receipt is allowed. However, none of the phone numbers, e-mail addresses or URLs contained in the body of the mail message can be used.
When the sender is neither of the above	E-mail: Only the sender name and subject are received. Body text and attached data are not received. C-mail: Not received.

- **Turning on “Teens Restrict (M44✕)” and Teens Mode makes it possible to restrict call time and the number of mail sends.**

● Making a Call


To someone who is a Pair partner	No restriction
To someone who is not a Pair partner	Call time is restricted. Further calling is not possible if the call time exceeds the “Teens Restrict (M44✕)” setting.



● Sending a Mail


To someone who is a Pair partner	No restriction
To someone who is not a Pair partner	Number of sends is restricted. Further mailing is not possible if the number of sends exceeds the “Teens Restrict (M44✕)” setting.

Turning on Teens Mode

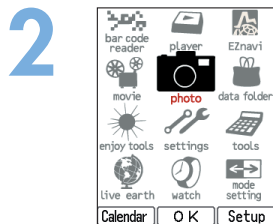1 While the standby screen is displayed, press .




2 Use  to select “mode setting,” and then press  (OK).

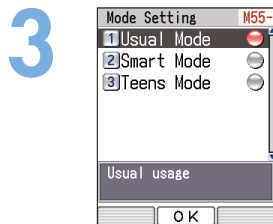

3 Press  (Teens Mode).



Teens Mode

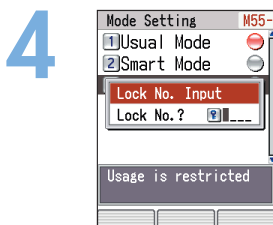

4 Enter the lock number.



Note

- Input of the lock number is required when changing from Teens Mode to Normal Mode or Smart Mode.



Your A5512CA supports two types of mail:
e-mail and C-mail.

Using E-mail


To use e-mail, you need to apply for an EZweb subscription. If you did not apply when you purchased your phone, contact your nearest au shop or the au Customer Service Center.

In addition to an EZweb subscription, you also need to perform an initialization procedure before you can use e-mail. If you have not performed initialization yet, refer to “Initializing E-mail and EZweb” (page 21).

E-mail makes it possible for you to exchange mail with a computer and with another cellphone that supports e-mail. You can send mail messages that contain up to 5,000 double-byte characters, and you can attach photos and movies to e-mail messages.

Page 50

 - You can send an e-mail to up to five different addresses.
- You can send up to 1,000 e-mail messages (each addressee counts as a separate message) per day.
- The send and receive operations may take longer when a mail message has data attached.

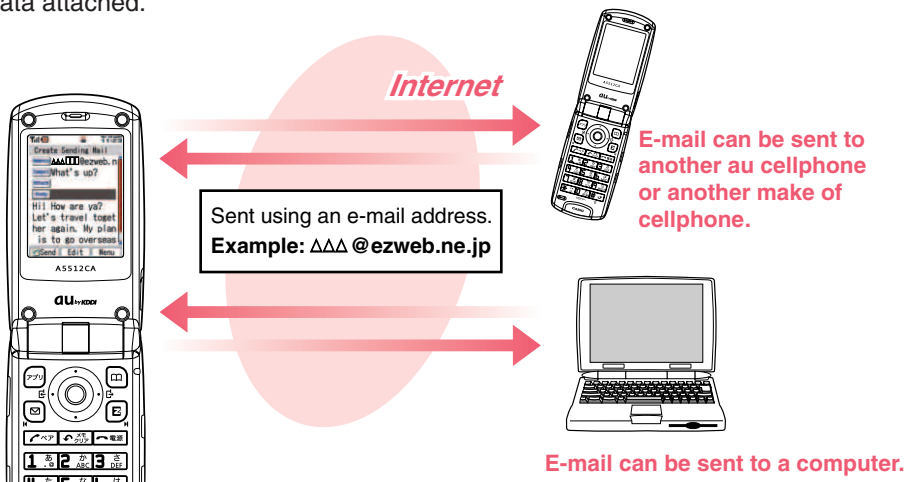

Using C-mail

C-mail lets you exchange text messages that contain up to 50 double-byte characters with another au cellphone that supports C-mail.

Phone numbers are used as C-mail addresses.

▶ Page 56



- au subscribers in the Kanto and Chubu areas do not need a separate subscription to use C-mail. Subscribers outside of Kanto and Chubu require a separate subscription.



C-mail Center

Sent using a phone number.
Example: 090-0001-XXXX

Received using a phone number.
Example: 090-0002-XXXX



C-mail can be sent to another au cellphone.

Mail

C-mail Security

- C-mail security blocks C-mail that contains any URLs (<http://△△△>, <https://△△△>) or phone numbers in its body text. C-mail security is turned on by default the when you first start using the phone.
If you want to be able to receive C-mail messages that contain URLs and phone numbers, you can turn off C-mail security.


Creating and Sending E-mail Messages



- While the standby screen is displayed, press , and then press **1**  (Create New).



2

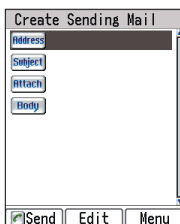





- Select **Address**, and then press  (Edit).



Address: Address to which the e-mail will be sent.
You can send an e-mail to up to five different addresses.

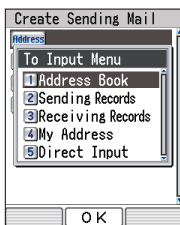3

 




- Press **1**  (Address Book), use  to select an addressee, and then press  (Select).

You can select an addressee from sending records, receiving records, or My Address, or you can enter an address.

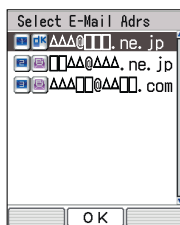


4



- Use  to select the e-mail address you want to enter, and then press  (OK).



5

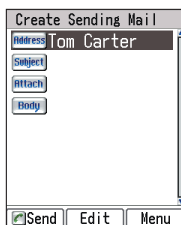


Use  to select **Subject**, and then press  (Edit).

Subject: Subject of the e-mail message.



6




Enter the subject and then press  (OK).


Use  to select **Body**, and then press  (Edit).

Body: Body of the e-mail message.




7

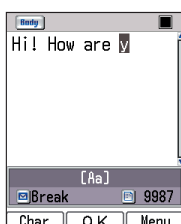

Enter the body text and then press  (OK).



8

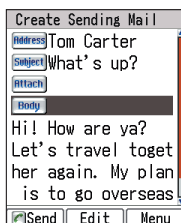



Press  (Send) or .

The message "Sent" appears on the display after the e-mail message is sent.




Reading Received E-mail Messages

“ E-Mail” and  appear on the standby screen to indicate that an e-mail message has been received.




Received e-mail icon

1

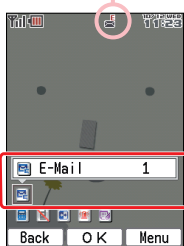

Select “ E-Mail” and then press  (OK).

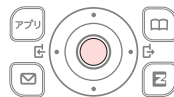


2





Press  (OK).



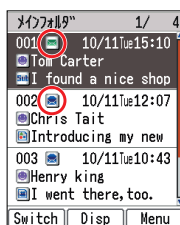

3




Use  to select the unread e-mail you want to view, and then press  (Disp).






 : Indicates an unread message.
 : Indicates a previously read message.

4



This displays the received e-mail message. If all of the message cannot fit, press  to scroll.




Use  and  to scroll between messages. Press  to return to the e-mail message list.

Reading an E-mail Message with an Attached Photo or Movie

To view the attached photo or movie, perform steps 1 and 2 under “Reading Received E-mail Messages” (page 52), and then perform the following steps.



1

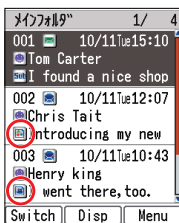

Use to select the e-mail message, and then press (Disp).

: Photo or other data attached.
 : Movie or other data attached.



2



Use to select the or line.

Press to scroll the screen and display the line at the end of the message text that contains the attached data.




3



Press (Play).

Each photo or movie attached to an e-mail message is displayed individually.

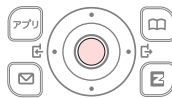

Note

- With some attached data, will be labeled “Rcv” in step 3. Pressing (Rcv) will receive the data and then display it.
- The send and receive operations may take longer when a mail message has data attached.
- Certain signal conditions can also cause e-mail send and receive to take longer than normal.


Replying to a Received E-mail Message





To reply to an e-mail message, perform steps 1 through 4 under “Reading Received E-mail Messages” (page 52), and then perform the following steps.

1




Press  (Reply).
This will display the e-mail composition screen.



You can also display the e-mail composition screen by pressing  (Menu) and then  (Reply).

2

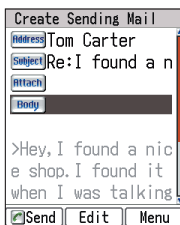

Press  (Edit) and then input the body text.



For the remainder of this procedure


 






→ Perform the procedure starting from step 7 under “Creating and Sending E-mail Messages” (page 50).

Avoiding Spam

You can use mail filters to block spam, to receive e-mail from specific sources only, etc. You can also block any e-mail that includes “未承諾広告※” (unsolicited advertisement) in the subject.



 ■ Configuring Mail Filter Settings

- ① While the standby screen is displayed, press .
- ② Press  (E-Mail Setup) →  (Other)
→  (Yes).
- ③ Press  (メールフィルター/Mail Filters).
- ④ Enter your PIN, press , use  to select “送信” (Send), and then press .

Your PIN is the 4-digit number you entered on your subscription contract.

自動的に変更されますので変更する必要はありません。

1 未承諾広告フィルター
2 アドレスフィルター
3 設定にあたって

←戻る

Mail filter setting screen

■ Unsolicited Advertisement Filter and Address Filters

● 未承諾広告フィルター (Unsolicited Advertisement Filter)

Blocks any e-mail that includes “未承諾広告※” (unsolicited advertisement) in the subject.

● アドレスフィルター (Address Filters)

Item	Description
全受信 (Receive all)	Allows receipt of all e-mail.
指定受信設定 (Receive specific)	Allows receipt of e-mail from specified sources only. You can configure Internet and cellphone domain options (一括指定先 /batch settings), and specify individual (個別指定 /individual settings) e-mail addresses, domains, and account names (the part of the address to the left of “@”).
指定拒否設定 (Block specific)	Blocks individually specified e-mail addresses, domains, and account names (the part of the address to the left of “@”).
なりすまし規制 (Block imposters)	Turning on “規制する” (Imposter block) along with “全受信” (Receive all) will block only e-mail that is configured to look like it came from a cellphone or PHS phone.

- You can configure your list of individual e-mail addresses to be blocked any time after turning on “指定受信設定” (Receive specific).

Note

- Use of mail filters is recommended to avoid spam.
- You can also avoid spam by changing the part of your e-mail address to the left of “@” (page 24).

Creating and Sending C-mail Messages




- While the standby screen is displayed, hold down for about one second, and then press **1** (Create New).



- Select **Address**, and then press (Edit).



- Press **1** (Address Book), use to select an addressee, and then press (Select).

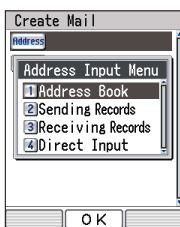


You can also select a phone number from sending records or receiving records, or you can enter an address.

- Use to select the phone number you want to enter, and then press (OK).



5

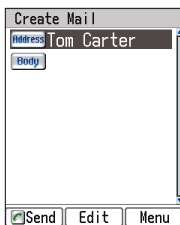


Use to select **Body**, and then press (Edit). Enter the body text and then press (OK).



6

Press (Send) or .

When the C-mail reaches the other party, the message “Completed” appears, and the message is stored in your sending records.

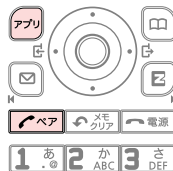

Reading Received C-mail Messages

“ C-Mail” and appear on the standby screen to indicate that a C-mail message has been received.


Mail

Received C-mail icon


1



Select “ C-Mail” and then press (OK).

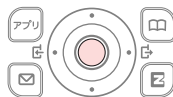

2

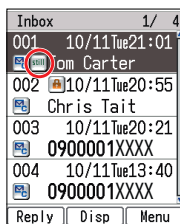


Use to select the unread C-mail you want to view, and then press (Disp).



: Indicates an unread message.

3

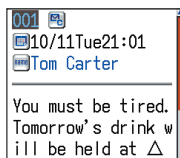

This displays the received C-mail message.

Use and to scroll between messages. Press to return to the C-mail message list.

Camera Features

Your A5512CA comes with a built-in 1.28-million effective pixel camera that you can use to record photos and movies. You can attach the photos and movies that you record to e-mail messages.

Using the Camera

Shooting a Photo (page 60)

Recording a Movie (page 64)

Use your images for A5512CA functions!

You can use photos you shoot for the standby screen, for the image that appears while the ring tone is sounding, and even in your address book.



Send images by e-mail!

You can send a photo or movie (excluding those recorded in Video Mode) whose data is up to 500KB* as an e-mail attachment.

“Attaching a Photo or Movie to an E-mail Message” (page 68)




* Certain signal conditions can cause e-mail send and receive to take longer than normal.

Tips for Better Photos

Shooting in Phone Mode


Taking care to avoid blocking the lens with your fingers, hold the phone securely in one hand as you support it with the other hand.

Use your thumb to press ● (Shutter) to release the shutter.

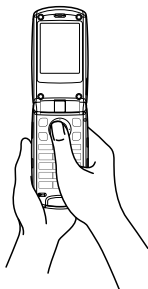

Shooting in PC Mode

Taking care to avoid blocking the lens with your fingers, hold the camera securely with both hands. Use the index finger of your right hand to press シヤッター.

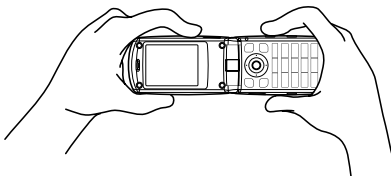

Tips for Avoiding Hand Movement

- Remain steady by keeping your arms lightly against your sides and standing with your feet about shoulder width apart. Having your arms away from your side or extended in front of you can cause blurred images.
- When you press the shutter button, remain still until your shutter tone finishes sounding. This is especially important when shooting where lighting is dim.
- A self-timer is also provided for shooting photos. With the self-timer, you do not need to press the shutter button to take a photo, so there is less chance of a blurred image caused by accidental movement of the phone.


Photo and Movie Sizes

The following shows the sizes of the photos and movies that can be recorded with your A5512CA.

Photo Sizes

Phone Mode

- Phone 120×160 —①
- Wallpaper 240×320 —②
- Coupling Shot (240×320) —②
- Updown Shot (240×320) —②
- Serial Shot (240×320) —②

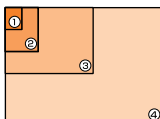


PC Mode

- VGA 640×480 —③
- SXGA 1280×960 —④

Movie Sizes

Mail Mode

- Standard S 96×80 —①
- Standard M 128×96 —②
- High Quality M 128×96 —②
- High Quality L 176×144 —③

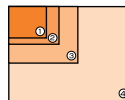

Video Mode

- QVGA 320×240 —④

Camera



Shooting a Photo

- 1** While the standby screen is displayed, press .



- Use  to select “photo,” and then press  (OK).



- Point the lens at the subject and then press  (Shutter).



The phone will emit a shutter sound.
You can also press  in place of .

Note that the phone emits the shutter sound even if it is in Manner Mode.



- Press  (Save).



The display will show the message “Saved to data folder,” and then return to the photo monitor screen.
Photos you shoot are saved to the “Photo Folder,” which is in the data folder.

Note

The initial photo mode setting when you purchase your A5512CA is Phone Mode (Wallpaper 240×320).

Photo File Names (Inside the Photo Folder)

Example Photo File Name: 051012_1123~0001



 














Date: 2005 October 12

Time: 11:23 a.m.

 


Serial number

Shooting Techniques



The following useful functions can be used when shooting photos.


Zoom/Wide		Press  to zoom in.	Photo Size		Press  to cycle through the photo sizes.
		Press  to zoom out.			
Brightness		Press  to make the image darker.	Self-timer		Press  to toggle the self-timer on and off.
		Press  to make the image brighter.			
Shot Light		Use this light when available lighting is dim. (Auto→ON→OFF)	Best Shot		Press  to toggle Best Shot on and off.
Photo Mode		Press  to cycle through the photo modes.			Press  to cycle through the Best Shot scenes.

Recovering from a Mistake

If the image does not look the way you want, press  or  in place of  (Save) in step 4 of the above procedure. Next, repeat step 3 to re-shoot.


Displaying Key Help


While  (key help icon) is displayed in the lower right corner of the screen, press  to display key help.



Press  again to exit key help.


Viewing Photos



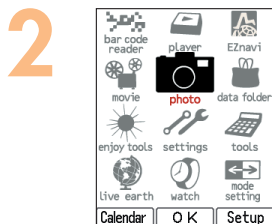


- 1 While the standby screen is displayed, press .

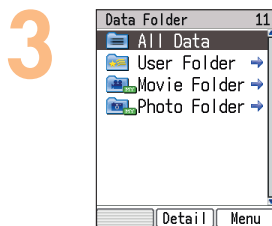

Use  to select “data folder,” and then press  (OK).



Use  to select “Photo Folder,” and then press  (Detail).

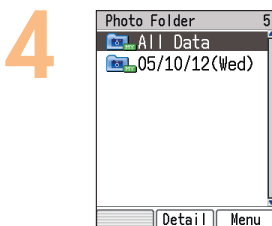




Use  to select a folder, and then press  (Detail).



Selecting “All Data” displays a list of all the photos in the Photo Folder.
Selecting a folder with a date displays a list of all photos that were shot on that date.

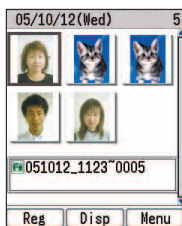
5



Use  to select the photo you want, and then press  (Disp).



6

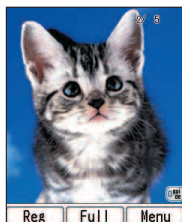

The photo will appear on the display.

Recording a Movie



- While the standby screen is displayed, press **OK**, use **Navigation Pad** to select “movie,” and then press **OK** (OK).



- Point the lens at the subject and then press **OK** (Rec).



The phone will emit a shutter sound to signal the start of recording.

You can also start recording by pressing **シャッター**.



- To stop recording, press **OK** (End).



If you do not press **OK** (End), recording will stop automatically after about 15 seconds.

The phone emits a shutter sound when recording stops.



- Press **OK** (Save).



Note

The initial default movie mode setting when you purchase your A5512CA is Mail Mode (High Quality L 176×144). The maximum recording time in Mail Mode is 15 seconds.

Movie File Names (Inside the Movie Folder)

Example Movie File Name: 051012_1123~0001

Date: 2005 October 12








 






Time: 11:23 a.m.

Serial number




- “S_” is added to beginning of the movie file name when the movie size is Standard S.

Recording Techniques



The following useful functions can be used when recording movies.


Zoom/Wide		Press  to zoom in.	Movie Mode		Press  to cycle through the movie modes.
		Press  to zoom out.			
Brightness		Press  to make the image darker.	Movie Size		Press  to cycle through the movie sizes.
		Press  to make the image brighter.			
Pause		Press to pause recording.	Self-timer		Press  to toggle the self-timer on and off.
Shot Light		Use this light when available lighting is dim. (Auto→ON→OFF)			

   Recovering from a Mistake


If the movie is not the way you want, press  or  and then  (Cancel) in step 4 of the above procedure. Next, repeat step 2 to re-shoot.

Using Key Help

While  (key help icon) is displayed in the lower right corner of the screen, press  to display key help.



Press  again to exit key help.

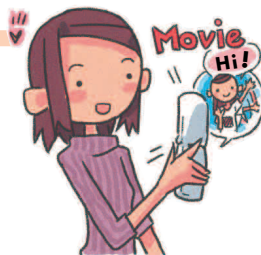
Viewing Movies






- 1 While the standby screen is displayed, press .

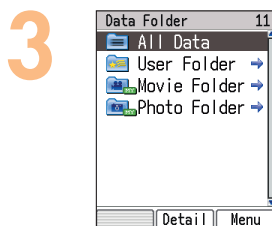

- Use  to select “data folder,” and then press  (OK).



- Use  to select “Movie Folder,” and then press  (Detail).

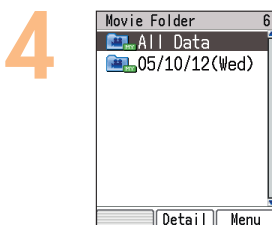


- Use  to select a folder, and then press  (Detail).





Selecting “All Data” displays a list of all the movies in the Movie Folder.

Selecting a folder with a date displays a list of all movies that were recorded on that date.

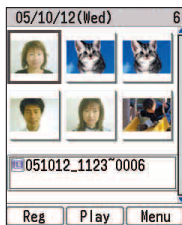5



Use  to select the movie you want, and then press  (Play).



6

This will play the movie.

To pause movie playback, press  (II).

Playback will stop automatically when the end of the movie is reached.

Attaching a Photo or Movie to an E-mail Message



■ Sending a photo or move with e-mail

After performing the first three steps under “Shooting a Photo” (page 60) or “Recording a Movie” (page 64), perform the following steps.

1



Press (E-Mail).



2




Press **1** (Attach).

Photos you shoot are stored in the Photo Folder and movies are stored in the Movie Folder, which are inside the data folder.



3

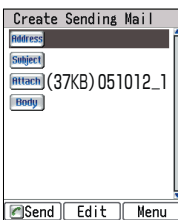
 



Perform the procedure starting from step 2 under “Creating and Sending E-mail Messages” (page 50) to create the e-mail message.

- A movie attached to an e-mail can be played on a cellphone that supports movie playback or on a computer.

Using Photo Mail

Photo Mail automatically converts images so they can be viewed correctly on a non-au cellphone. In order to use Photo Mail, you need to change the receiver's e-mail address to a special Photo Mail address.

When you send an e-mail using the auto address converter, the e-mail address will be converted automatically as shown below. To use the auto address converter, press  (Menu) on the e-mail composition screen, and then press  (Send フォトメール便).

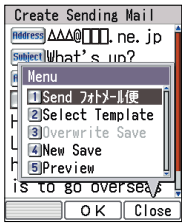

Addressee Service	E-mail address	Converted Address
DoCoMo	△△△@docomo.ne.jp	△△△@d.nepm.jp
Vodafone	△△△@□.vodafone.ne.jp	△△△@□.vodafone.nepm.jp
TU-KA and au phone without movie mail support	△△△@ezweb.ne.jp	△△△@ezweb.nepm.jp

☐ varies depending on subscription region.

 


Using EZweb




To use EZweb, you need to apply for an EZweb subscription. If you did not apply when you purchased your phone, contact your nearest au shop or the au Customer Service Center.

In addition to an EZweb subscription, you also need to perform an initialization procedure before you can use EZweb. If you have not performed initialization yet, refer to “Initializing E-mail and EZweb” (page 21).

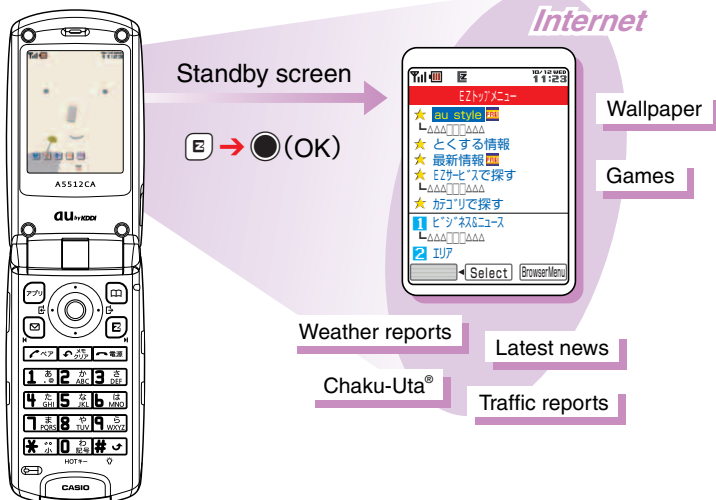EZweb provides you with access to Chaku-Uta®, the latest news, and other web-based contents.



Displaying the EZ Top Menu

1 While the standby screen is displayed press , use  to select “Top Menu,” and then press  (OK).



EZトップメニュー	
★ au style <small>FREE</small>	1
△△△△△△	
★ とくする情報	2
★ 最新情報 <small>FREE</small>	3
★ EZサービスで探す	4
△△△△△△	
★ カテゴリで探す	5
1 ビジネス&ニュース	6
△△△△△△	
2 エリア	7
△△△△△△	
3 ショッピング&オークション	8
△△△△△△	
4 ライフ	9
△△△△△△	
5 ホビー&カルチャー	10
△△△△△△	
6 キーワードで探す	11
7 料金・申込・インフォ <small>FREE</small>	12
★ 災害用伝言板 <small>FREE</small>	13
【English】	14
<small>FREE</small> マーク表示について	
(C) KDDI	
Select BrowserMenu	

1	au style Information and sites recommended by au
2	とくする情報 (Valuable Information) Free presents and valuable information for EZweb service subscribers
3	最新情報 (Latest News) Easy access to daily news, weather reports, horoscopes, etc.
4	EZサービスで探す (EZ Service Search) Recommended useful and fun EZweb services
5	カテゴリで探す (Category Search) Site search by category
6	ビジネス&ニュース (Business & News) Latest news, weather, stock prices and other business information
7	エリア (Area) Weather, maps, and other area-specific information
8	ショッピング&オークション (Shopping & Auctions) Cellphone shopping information and auction information
9	ライフ (Life) Information useful for everyday living
10	ホビー&カルチャー (Hobbies & Culture) Latest game, fortunetelling, and music information, and information about the latest hobby and entertainment trends
11	キーワードで探す (Keyword Search) Site search by keyword
12	料金・申込・インフォ (Charges, Applications, and Info) Information about charges, applications, au online manuals, and announcements from au
13	災害用伝言板 (Disaster Message Board) Registration and checking of well-being information during disasters
14	ENGLISH English sites



Important!

- The layout and contents of the EZweb screens shown in this manual are examples only, and are subject to change.
- Some sites charge for content in addition to call charges.


Viewing a Site

You can use access (connect to) EZweb from the EZ top menu. EZweb gives you access to a variety of useful and enjoyable sites.



Use to select the site you want, and then press (Select).

Use or to scroll back one screen. Holding down these keys for about one second returns to the EZ top menu.

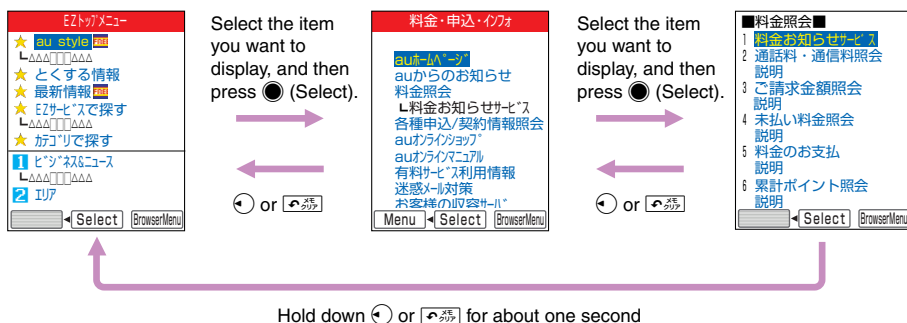

Note

Main Key Operations when Viewing a Site


	Selects items on the current display. Also scrolls the screen one line up or down when all of the information does not fit on the display.
	Goes to the selected site, or executes the currently selected item.
	Scrolls the screen one page up when all of the information does not fit on the display.
	Scrolls the screen one page down when all of the information does not fit on the display.
	Returns to the previous screen.
	Returns to the EZ top menu when held down for about one second.
	Exits EZweb and returns to the standby screen.

In addition to call charges, some sites charge for content.

Bookmarking Sites You Frequently Access



 1 Display the site you want to bookmark, and press (BrowserMenu).

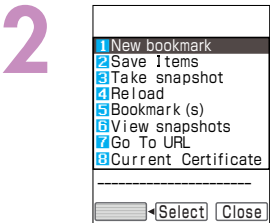


Press (New bookmark).

- You may not be able to bookmark some sites.




Press (Reg).

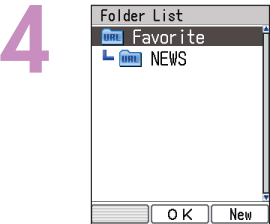

Use to select a folder, and then press (OK).

The message “Registered” will appear when bookmarking is complete.

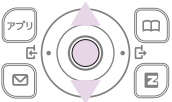

Note

You can have up to 100 sites bookmarked in the Favorite Site list.

Downloading Chaku-Uta®

To download a Chaku-Uta®, perform step 1 under “Displaying the EZ Top Menu” (page 71), and then perform the following steps.




1



Use to select “カテゴリで探す” (Category Search), and then press (Select).



2

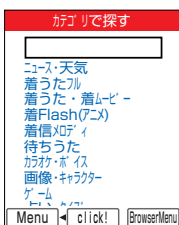

Use to select “着うた・着ムービー” (Chaku-Uta®/Chaku-Movie), and then press (Select).



3



Select the content (site) you want to use.

In order to use fee-based contents, you need to enter your EZ password or premium EZ password.

EZ Password:


This is the four-digit number you specified when you originally subscribed to the fee-based contents.

Premium EZ Password:

This is the four to eight-digit number you registered for your first “まとめてau支払い” (combined au payment service) payment.

Input the required password in accordance with the instructions that appear on the display. The first time you use a site, register the password you want to use.


4

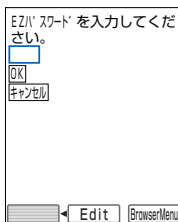

To download information, follow the instructions that appear on the display.

Downloaded data is stored in the data folder.

5

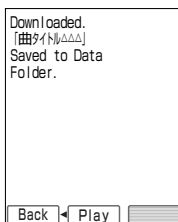


Press **● (Play)**, and then press **アプリ (Reg.)**.

You can play back the downloaded data by pressing **● (Play)**.




6

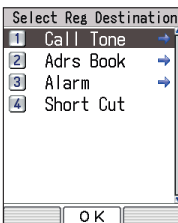

Press **1 あ (Call Tone)**.



7

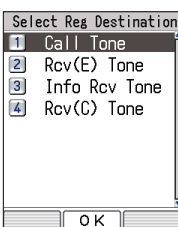

Press **1 あ (Call Tone)**.

The message “Set” will appear when setting is complete.



Important!

In addition to call charges, you will be charged in accordance with the pricing policy of each site to download Chaku-Uta® and other contents from a fee-based site.




Note

Perform the same procedure to download wallpaper and use it for the standby screen background.


Viewing a Bookmarked Site



- 1** While the standby screen is displayed, press **E**.

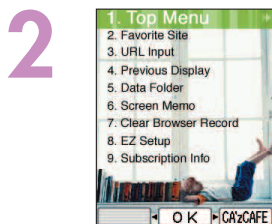

- Use **↑** to select “Favorite Site,” and then press **●** (OK).

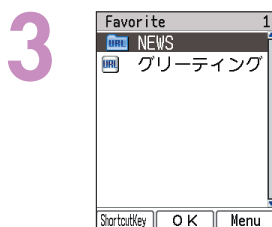

- Use **↑** to select a site or folder, and then press **●** (OK).




If you selected a folder, use **↓** to select a site and then press **●** (OK).

Checking Charges

You can use EZweb to check call charges and communication charges, a list of fee-based services to which you are currently subscribed, and the charges for fee-based services.



1

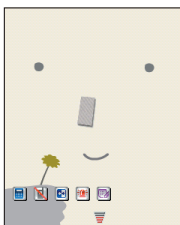

While the standby screen is displayed, press **●** **1** **あ** **1** **あ**.



2



Use **⬆** to select the item you want to check, and then press **●** (Select).



 
EZweb

Note

Note that call charges and communication charges are rough approximations only.


EZ Navi Features

EZ Navi uses global positioning system (GPS) information to provide you with a wealth of useful information.

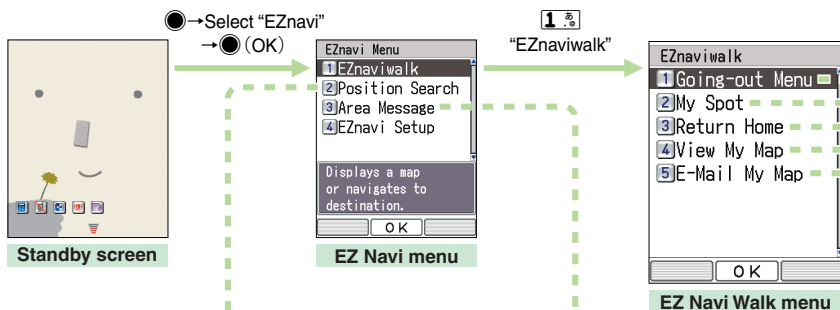

Position Search “安心ナビ位置確認”

This service lets you perform an operation on your A5512CA phone and check the current location of another au phone that has Position Search enabled. There are two types of Position Search service available: “位置確認メール” (Position Search Mail) (free) where you send a message to the other au phone to ask its location, and “いつも位置確認” (Auto Position Search) (fee-based), which lets you check the location of another au phone without requiring any operation on that phone.

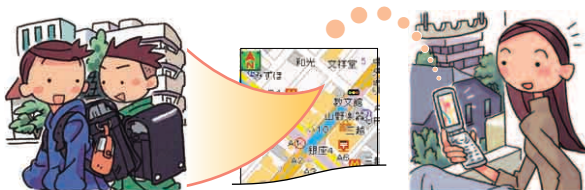

Area Message “安心ナビエリア通知”

Whenever an au phone enters a preset area during a specific time period, Area Message automatically sounds an alarm and sends a message to another specified au phone.



“Going-out Menu”

A menu of useful options you can use while you are out.



オススメ (New)	The latest news and featured information • “おためしナビ” (Navi Demo) provides a demo of voice navigation.
乗換検索 (Transfer Search)	Searchable source of train transfer and timetable information
ナビ (Navigation)	Voice navigation to a specific destination, and “My Spot” registration
現在地 (Current Location)	Searchable source of maps, shops, and other information about your current location
道路情報 (Traffic Information)	Searchable source of real-time Japan-wide traffic information
設定登録 (Setups and Registrations)	Setups, membership registration, etc.

“My Spot” (▶ page 80)

Just register destinations you often visit, your home location, and your favorite destinations (place of work, friend's house, shops, etc.) for quick and simple navigation when you need it.

“Return Home” (▶ page 83)

Simply preset the location of your home for easy navigation back there from any other location. Useful information includes train transfers and estimated time of arrival.

“View My Map”

When you are in an area that is unfamiliar to you or if you lose your way, simply select “View My Map.” This will display a map showing your current location in real time.



Your initial location is indicated by ★. Changes in your location are indicated in real time by 🧑.

Map screen

“E-Mail My Map”

You can e-mail a map of your current location to another phone, which can then use the map to navigate to your location.

Note

- In addition to packet charges, you may be charged other fees for using EZ Navi.
- The layout and contents of the EZweb screens shown in this manual are examples only, and are subject to change.

EZ Navi Walk Menu

Registering Your Home Location

You can use “My Spot” to register locations you go to often (your home, your place of work, your friends’ homes, shops, etc.) for quick and easy display of routes and maps when you need them.

Example: Registering your current location as “Home”




- While the standby screen is displayed, press .



- Use  to select “EZnavi,” and then press .



- Press **1**  (EZnaviwalk).

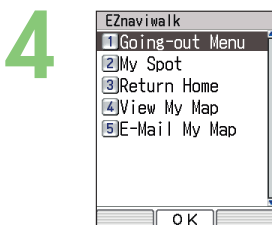

- Press **2**  (My Spot).




5



Select “自宅” (Home), and then press (Menu).




6

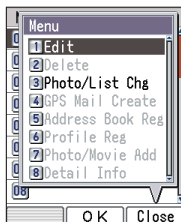

Press **1** (Edit).




7

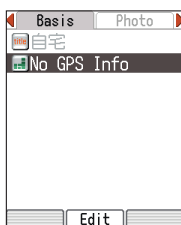

Use to select “No GPS Info,” and then press (Edit).




8

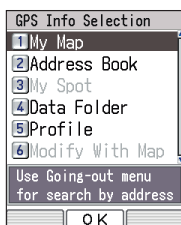

Press **1** (My Map).



9

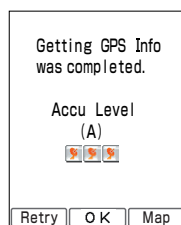

Press (OK).





Press  (Reg).

This registers your current location as home.



Note

- You also need to perform an initialization procedure before you can use this service. If you have not performed initialization yet, refer to “Initializing E-mail and EZweb” (page 21).
- The EZ Navi Walk application is required to use this function. If you try to use EZ Navi Walk and do not have the application installed, follow the instructions that appear on the display to download the application.
- Note that EZ Navi Walk has a menu you can use free of charge, and a fee-based menu that requires registration.
- Since EZ Navi Walk is a positioning service that uses the GPS satellites, correct GPS information may not be accessible when you are indoors. If this happens, move to a location where you can see the sky.
- The layout and contents of the EZweb screens shown in this manual are examples only, and are subject to change.


Return Home

In order to use the following procedure to return home, you first need to register your home position.

To perform the Return Home procedure, perform steps 1 through 3 under “Registering Your Home Location” (page 80), and then performing the following steps.




1

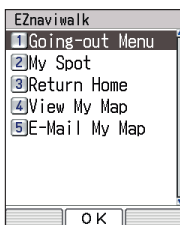

Press **3** **さ DEF** (Return Home).



2

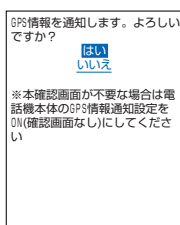

Use **↑** to select “はい” (Yes), and then press **●**.



3



Use **↑** to select “ルート案内開始” (Start Route Guidance), and then press **●**.



This will display a map of your current location, which scrolls automatically as you move around. “**□**” is your starting point, while “**□**” is your destination (home).

Navigation engine by NAVITIME JAPAN/Map© Shobunsha Publications, Inc. (昭文社)

Smart Mode

Smart Mode lets you limit operation to the telephone function, address book, camera, e-mail, C-mail, EZweb, and other frequently used functions, which simplifies operation.





Entering Smart Mode

1 While the standby screen is displayed, press




2



Use  to select “mode setting,” and then press  (OK).



3

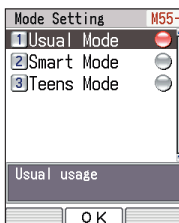


Press  (Smart Mode).






Note


- Input of the lock number is required when changing from Teens Mode to Smart Mode.
- When you enter Smart Mode, Smart Mode settings change automatically to those configured on the phone before you entered Smart Mode.

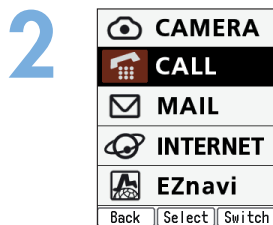

Exiting Smart Mode


- 1** While the standby screen is displayed, press .

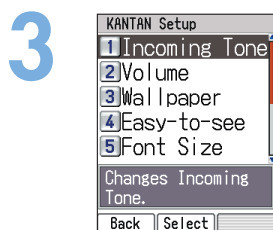

- Use  to select “SETTINGS,” and then press  (Select).



- Use  to select “SmartMode OFF,” and then press  (Select).

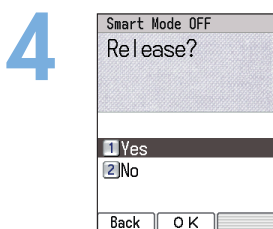


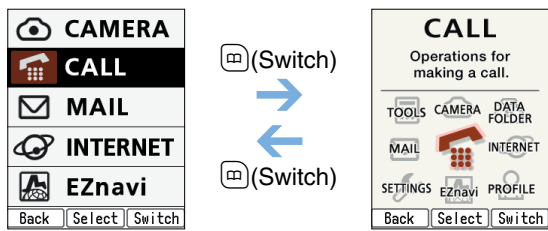
- Press  (Yes).

This returns to Usual Mode.



Using the Smart Mode Main Menu

Smart Mode has its own special main menu.
You can switch between the two available Smart Mode main menu styles by pressing  (Switch).




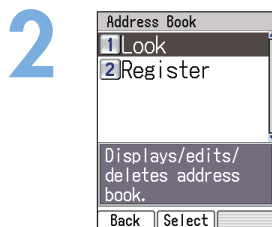
Menu Item		Description
CAMERA	Photo1	For selecting the photo or movie recording, and the correction method
	Photo2	
	Movie1	
	Movie2	
	Correction	
CALL	Address Book	For using the address book, outgoing records, and incoming records, and for registering data in the address book
	Outgoing Records	
	Incoming Records	
	AdrBookReg	
MAIL	E-Mail	For composing and reading E-mail and C-mail messages, and for converting E-mail addresses
	C-Mail	
INTERNET		For using EZweb
EZnavi		For using EZ Navi
DATA FOLDER		For viewing and deleting data in the data folder

Menu Item		Description
TOOLS	Calendar	For using the calendar, calculator, and other tools
	Calculator	
	Alarm Clock	
	Countdown Timer	
	Stopwatch	
SETTINGS	Incoming Tone	For changing the incoming tone, wallpaper, and character size, for turning Manner Mode on and off, and for turning Smart Mode off
	Volume	
	Wallpaper	
	Easy-to-see	
	Font Size	
	Voice Mail	
	Manner Mode	
	Toll/Inquiry	
	SmartMode OFF	
PROFILE		For displaying your current phone number and e-mail address

 
Adding Data to the Address Book in Smart Mode




1 While the standby screen is displayed, press .




Press **2**  (Register), and then press .

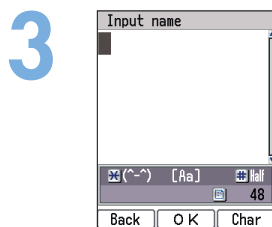


Enter the name and then press .



 To input text
→ “Inputting Characters” (page 98)

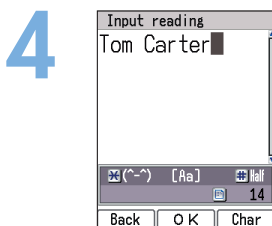

Check the reading of the name you input, and then press .



5

Address book register

Input phone number?

1 Yes
2 No

Back Select

Press **1** あ (Yes).

ベア メモ クリア 電源

1 あ 2 か 3 さ
ABC DEF

4 た 5 な 6 は
GHI JKL MNO

7 ま 8 や 9 ら
PQRS TUV WXYZ

* 小 0 わ 記号 #

6

Address book register

Select phone number.

1 Incoming Records
2 Outgoing Records
3 Input By Myself

Back Select

Press **3** さ (Input By Myself).

You can also select data in incoming records and outgoing records.

ベア メモ クリア 電源

1 あ 2 か 3 さ
ABC DEF

4 た 5 な 6 は
GHI JKL MNO

7 ま 8 や 9 ら
PQRS TUV WXYZ

* 小 0 わ 記号 #

7

Input phone number

[Phone Number] 36

Back OK

Enter the phone number, and then press **OK**.

When entering the number of a standard phone, be sure to include the area code.

アプリ

ベア メモ クリア 電源

1 あ 2 か 3 さ
ABC DEF

4 た 5 な 6 は
GHI JKL MNO

7 ま 8 や 9 ら
PQRS TUV WXYZ

* 小 0 わ 記号 #

8

Address book register

Input E-Mail address?

1 Yes
2 No

Back Select

Press **1** あ (Yes).

If you do not want to input an e-mail address, press **2** か (No), and then advance to step 11.

ベア メモ クリア 電源

1 あ 2 か 3 さ
ABC DEF

4 た 5 な 6 は
GHI JKL MNO

7 ま 8 や 9 ら
PQRS TUV WXYZ

* 小 0 わ 記号 #

9

Address book register

Select E-Mail address.

1 Sending Records
2 Receiving Records
3 Input By Myself

Back Select

Press **3** さ (Input By Myself).

You can also select data in sending records and receiving records.

ベア メモ クリア 電源

1 あ 2 か 3 さ
ABC DEF

4 た 5 な 6 は
GHI JKL MNO

7 ま 8 や 9 ら
PQRS TUV WXYZ

* 小 0 わ 記号 #

10




Enter the e-mail address, and then press **OK**.

To input an e-mail address
→ “Inputting an E-mail Address”
(page 99)




11

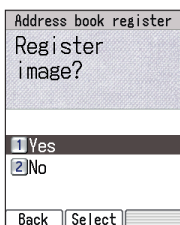

Press **2** (No).



12

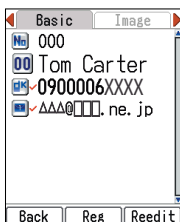

Press **OK** (Reg).




Note

- In the Smart Mode, you can input “Name,” “Reading,” “Phone Number1,” “E-mail Address1,” and “Image” data only into an address book record.
- You could press **1** (Yes) in step 11 to select a photo in the data folder and assign it to the address book record, if you want.
- Pressing **Reedit** in step 12 and then pressing **1** (Yes) returns to step 3 from which you can edit the contents of the record.


Using the Address Book in Smart Mode



- 1** While the standby screen is on the display, press and then **1 あ** (Look).

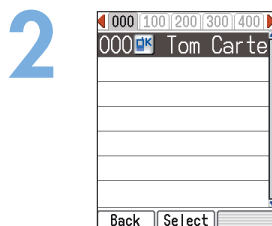

- Use to select the address book record you want, and then press (Select).

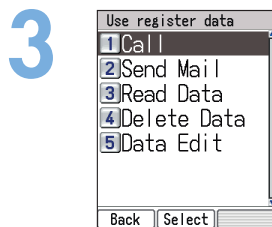

- Press **3 さ** (Read Data).




- 1 あ** (Call):
Dials the number of the selected record.

- 2 か** (Send Mail):
Select to compose an e-mail message and send it to the address of the selected record.
To create an e-mail message
→ Perform the procedure starting from step 7 under “Creating and Sending E-mail Messages in Smart Mode” (page 92).

- 4 た** (Delete Data): Deletes the selected address book record.

- 5 な** (Data Edit): Select to edit the selected address book record.

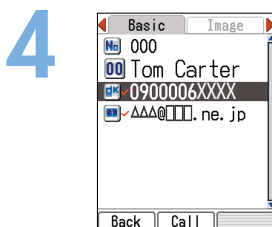


- The address book record will appear on the display.

- Use to select the phone number, and then press (CALL).

- To send an e-mail message, use to select the e-mail address and then press (E-Mail). This will display the e-mail composition screen.


Creating and Sending E-mail Messages in Smart Mode

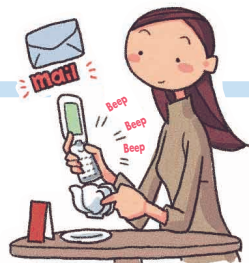

1 While the standby screen is displayed, press




2

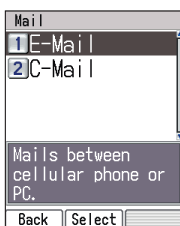

Press **1** あ (E-Mail).




3

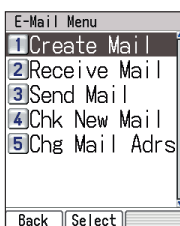

Press **1** あ (Create Mail).



4

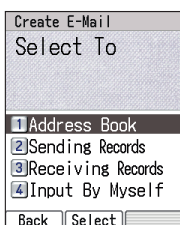


Press **1** あ (Address Book).

You can also input data with
“Sending Records,” “Receiving
Records,” and “Input By Myself.”



5

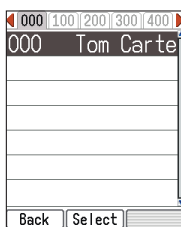

Use to select the address book record you want, and then press (Select).



6




Press (Select).

If an address book record has more than one e-mail address, only the address that is specified as the usual e-mail address is displayed in the Smart Mode.




7

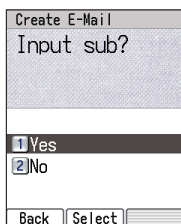

Press (Yes).



8

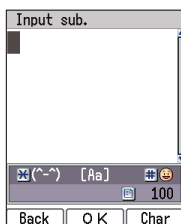


Enter the subject and then press (OK).

To input text
→ "Inputting Characters" (page 98)



9

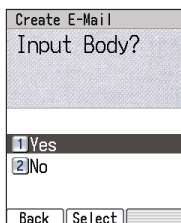

Press (Yes).



10




Enter the body text and then press **OK**.

To input text
→ “Inputting Characters” (page 98)



11

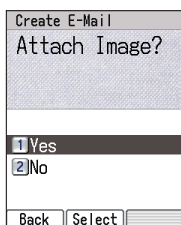


Press **2** (No).

You could also press **1** (Yes) to select a photo in the data folder and attach it to the e-mail message. In Smart Mode, an e-mail message can have only one attachment.



12

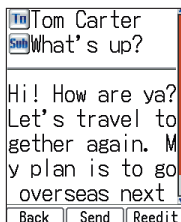

After checking the content of the e-mail, press **Send**.




Note

Pressing **Reedit** instead of **Send** in step 12 returns to step 4, from which you can edit the contents of the e-mail message.

Shooting a Photo in the Smart Mode



1 While the standby screen is displayed, press **●**, use **⬆** to select “CAMERA,” and then press **●** (Select).

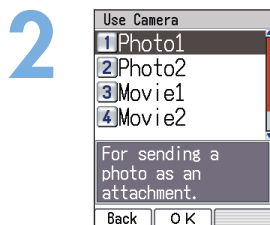

Press **1** **あ** (Photo1).

Photo 1	Wallpaper 240×320
Photo 2	VGA 640×480



3 Point the lens at the subject and then press **●** (Shutter).

The phone will emit a shutter sound.
You can also press **シャッター** in place of **●**.



4 Press **●** (Menu) and then **1** **あ** (Save).



Note

Pressing **●** (Menu) in step 4 and then pressing **2** **か** (Send Mail) will display a screen for composing an e-mail message with attached photo.
To create an e-mail message

→ Perform the procedure starting from step 4 under “Creating and Sending E-mail Messages in Smart Mode” (page 92).



Viewing Photos in the Smart Mode




- 1 While the standby screen is displayed, press **OK**, use **Up/Down** to select “DATA FOLDER,” and then press **OK** (Select).



- 2 Use **Up/Down** to select “Photo Folder,” and then press **OK** (Select).

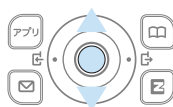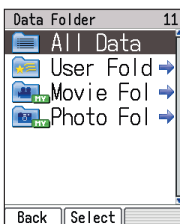


- 3 Use **Up/Down** to select a folder, and then press **OK** (Select).

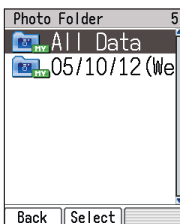

Selecting “All Data” displays a list of all the photos in the Photo Folder. Selecting a folder with a date displays a list of all photos that were shot on that date.

- 4 Use **Left/Right** to select the photo you want, and then press **OK** (Menu).

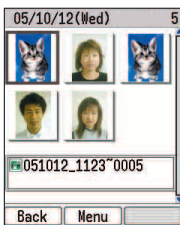

5



Press **1 あ** (Play).

2 か (Delete): Deletes data.

3 さ (Attach E-Mail):

Displays a screen for composing an e-mail message with an attachment.

To create an e-mail message

→ Perform the procedure starting from step 4 under “Creating and Sending E-mail Messages in Smart Mode” (page 92).



6



The photo will appear on the display.

Inputting Characters



Input characters using keypad keys **0** わ 記号 through **9** 5 WXYZ.

The table below shows the characters each key cycles through when you press it.

Key	Number of Presses								
	1	2	3	4	5	6	7	8	9
1 <small>あ</small>	.	@	-	_	/	:	~	1	
2 <small>か ABC</small>	a	b	c	A	B	C	2		
3 <small>さ DEF</small>	d	e	f	D	E	F	3		
4 <small>た GHI</small>	g	h	i	G	H	I	4		
5 <small>な JKL</small>	j	k	l	J	K	L	5		
6 <small>は MNO</small>	m	n	o	M	N	O	6		
7 <small>ま PQRS</small>	p	q	r	s	P	Q	R	S	7
8 <small>や TUV</small>	t	u	v	T	U	V	8		
9 <small>ら WXYZ</small>	w	x	y	z	W	X	Y	Z	9
0 <small>わ 記号</small>	0 . @ - _ / : ! ? ~ () * # + , ^ ; < = > \$ ¥ % & [] ' ` { } ~ (Space)								
* 小	Toggles between upper case and lower case (Example: a ⇄ A).								
# ↵	Returns to the previous character.								

- In order to input consecutive characters that are assigned to the same key, press to move the cursor and then press input the next character.

Important!

Allowable Characters in Your E-mail Address

Your e-mail address (the part to the left of “@”) can contain up to 20 characters, including single-byte English lower case letters, hyphens (-), and periods (.). Two periods (.) are not allowed in succession, and a period cannot be used as the first/end character of an address. Also, a zero (0) cannot be used as the first character.

Characters and symbols that are shaded in the above table cannot be used to the left of “@” in the address format “△△△@ezweb.ne.jp”.

Note

You can input a period (.) or “at” symbol (@) by pressing **1** あ.

Inputting an E-mail Address

■ Inputting “mark@ezweb.ne.jp”

In this example, we will input “mark@ezweb.ne.jp” for “E-Mail Adrs1.” To input “E-Mail Adrs1,” perform steps 1 through 7 under “Creating a New Address Book Record” (page 38), and then perform the following steps.



1



Input “mark.”

To input “m”: Press **6** は MNO once.
To input “a”: Press **2** か ABC once.
To input “r”: Press **7** ま PQRS three times.
To input “k”: Press **5** な JKL twice.




2



Press (Menu).



3

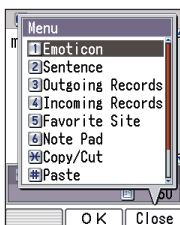



Press **2** か ABC (Sentence).



4




Use  to select “@ezweb.ne.jp”, and then press  (OK) to input “mark@ezweb.ne.jp”.

You could also input “@ezweb.ne.jp” by pressing **0** わ 記号 **2** か ABC.



Pictographs and Preset Phrases

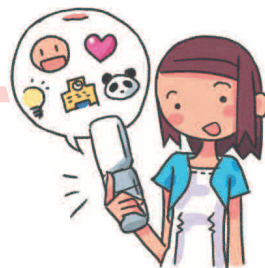

The following procedure shows how to input pictographs and preset phrases on the text input screen.

1



Press **アプリ** (Char), and then **は MNO** (Image).

You can also select a pictograph by pressing **#** **↩**.



2




Use **⬅** to select the pictograph you want, and then press **●** (Select).

Use **☐** and **☑** to scroll through the various categories of pictographs.

To input consecutive pictographs, press **☐** (Serial).



3

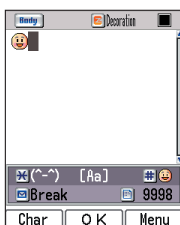



Press **☐** (Menu), and then **3 さ DEF** (Sentence).



4



Use  to select the preset phrase you want, and then press  (OK).



Here we will select “Happy birthday!”.
You can also input “Happy birthday!” by pressing

  .

5



The resulting input is “ Happy birthday!”.

Note

The following shows the input screens for symbols (double-byte) and emoticons.

Symbol (Double-byte) Input



Other Functions

In addition to the functions covered in this Basic Manual, your A5512CA also has the following features.

Barcode Reader

You can use the camera to read QR codes and barcodes.

Serial Shot

(Photo)

You can shoot up to nine consecutive images and store all of them or only selected images in memory.

EZ Chaku-Uta®

You can download certain songs, including vocals, and use them in place of your ring tone, or for your own playback enjoyment.

Post Recording/Telop

(Movie)

After recording a movie, you can add audio or text. You can select from among 24 colors for the text and 169 colors for the background.

EZ apps (BREW®)

Enjoy downloaded games and other software.

Enjoy Tools

Use these tools to make using your photos and movies, as well as download data more enjoyable.

Best Shot

(Photo)

Instantly set up the camera for portraits, night shots, or other conditions by simply selecting the applicable sample scene.

Mail Recipe

(E-mail)

Simply follow the steps provided for quick and easy composing of Basic Mail without attachments, Photo Mail, Doodle Mail, Movie Mail, and Exciting Mail.

Macro Mode






 










(Photo and Movie)

 A simple operation of the macro switch on the side of the phone lets you move in to about 13 cm for intimate close-ups of food, flowers, and other subjects.

Clock

The alarm, countdown timer, and stopwatch come in handy throughout the day.

 Troubleshooting

Symptom	What to check	What to do	Reference Page
The phone does not turn on. 	Is the battery pack installed correctly ?	Correctly install the battery pack.	—
	Is the battery pack charged ?	Charge the battery pack.	P.12
	Are you holding down  for at least 1.5 seconds ?	Hold down  for at least 1.5 seconds to turn on the phone.	P.15
I can't make calls. 	Is  (Out of Range) on the display ?	Wait until you are in a location where  is not displayed before trying to make a call.	P.15
	Are you including the area code?	When making a call to a standard phone, you need to input the area code and then the phone number.	P.28
	Is the phone turned on?	Hold down  for at least 1.5 seconds to turn on the phone.	P.15
	Did you press  ?	After inputting the phone number, press  to dial it.	P.28
	Is Emission OFF Mode turned on?	Turn off Emission OFF Mode.	—
I can't receive calls.	Is  (Out of Range) on the display?	Move to a location where  is not on the display.	P.15
	Is the phone turned on?	Hold down  for at least 1.5 seconds to turn on the phone.	P.15
	Is Emission OFF Mode turned on?	Turn off Emission OFF Mode.	—
Nothing happens when I press the keys.	Is the phone turned on?	Hold down  for at least 1.5 seconds to turn on the phone.	P.15
The phone emits a warning tone and then turns off.	Is battery pack power low?	Charge the battery pack.	P.12
The phone answers calls automatically.	Is Easy Voice Memo turned on?	Hold down  for about one second to turn off Easy Voice Memo.	P.36
	Is Drive Mode turned on?	Hold down  for about one second to turn off Drive Mode.	P.4
I can't hear the caller.	Is the earpiece volume level too low?	During a call, press  to increase earpiece volume.	P.35

If you lose your A5512CA


Turning on Remote Auto Lock makes it possible for you to auto lock your A5512CA from a remote location, which keeps others from using it.




■ Configuring Remote Auto Lock Settings

Use the following procedure to specify a time frame, a phone number, and a number of calls count. Remote Auto Lock will disable your A5512CA if the specified number of calls is placed to it without being answered from the specified phone number during the specified time frame.

- While the standby screen is displayed, press **● 4 た GHI 4 た GHI 2 か ABC.**

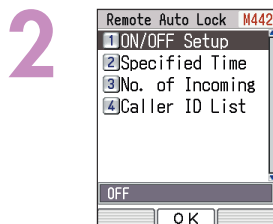

- Press **1 あ** (ON/OFF Setup), input the lock number, and then press **1 あ** (ON).

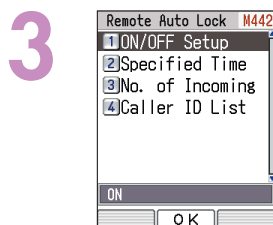


- Press **2 か ABC** (Specified Time), input the lock number, input the period you want to specify, and then press **● (OK)**.



This will set the period during which the specified number of unanswered calls must be received to trigger Remote Auto Lock. You can specify a period of 1 to 10 minutes.

4

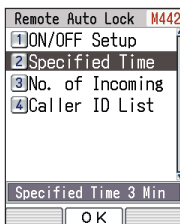


Press **3** (No. of Incoming), input the lock number, input the number of calls you want to specify, and then press **●** (OK).

This is the number of unanswered calls that need to be received to trigger Remote Auto Lock. You can specify from 3 to 10 calls.




5

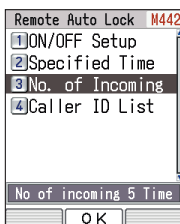

Press **4** (Caller ID List), and then input the lock number.



6

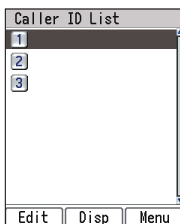

Use **▲** to select a setup number, press **アプリア** (Edit), input the phone number, and then press **●** (Reg).

You can register up to three different phone numbers.



You can also press **☐** (Menu) before inputting a phone number, and select the number from the address book, outgoing records, or incoming records, or you can specify a pay phone. Press **← 電源** to complete the setup procedure and return to the standby screen.

■ Triggering Remote Auto Lock

1

Within the preset period, call your A5512CA the specified number of times.

Remote auto lock is triggered and you will hear an announcement about auto lock after your A5512CA receives the specified number of calls. Triggering of Remote Auto Lock will cause your A5512CA to turn off and then back on again automatically.



Important!

- Remote auto lock cannot be triggered while your A5512CA is turned off or outside of the service area.

Hot Key

When you have Hot Key turned on, holding down **0** わ 記号 for about one second while the standby screen is displayed will dial a preset phone number or sound the Hot Buzzer.

Hot Dial

With Hot Dial, holding down **0** わ 記号 for about one second will dial a preset phone number.

■ To turn on Hot Dial

While the standby screen is displayed, press **●** **5** な JKL **9** ら WXYZ **1** あ .@, and input the lock number.

Next, input the phone number you want to preset, and then press **●** (Reg).

Hot Buzzer

With Hot Buzzer, holding down **0** わ 記号 for about one second will sound a loud-volume buzzer.

■ To turn on Hot Buzzer

While the standby screen is displayed, press **●** **5** な JKL **9** ら WXYZ **2** か ABC, and input the lock number.

■ To stop the Hot Buzzer

To stop the Hot Buzzer after it starts to sound, input the lock number.

- You cannot turn off the phone or perform any other operation while the Hot Buzzer is sounding. The Hot Buzzer will continue to sound until you input the lock number or until the battery pack goes dead.




Note

- The Hot Buzzer sounds from the phone's speaker, even if you have a separately available flat-type switched earphone microphone or a flat-type stereo earphone microphone attached to the phone.

Extension Mode

When the battery pack level goes low, Extension Mode automatically turns off signal emission and limits the functions you can use in order to conserve remaining power. It keeps the A5512CA operating longer when you are unable to recharge the battery pack right away.

To turn on Extension Mode, press  **5** な JKL **6** は MNO **1** あ .@.

A

Address Book	38
Adding outgoing or incoming record data to the address book	42
Creating a new address book record	38
Dialing from the address book	43
Editing	40
Inputting a name into the address book	38
Adjusting the earpiece volume during a call	35
Adjusting the ring tone volume	34

B

Battery level	15
Battery pack	10, 12

C

Camera	58
Recording a movie	64
Shooting a photo	60
Viewing movies	66
Viewing photos	62
Chaku-Uta®	
Downloading	74
Changing the display character size	26
Changing the ring tone	32
Charging the battery pack	12
C-mail	49
C-mail security	49
Create New	56
Creating and sending C-mail messages	56
Reading received C-mail messages	57
Using C-mail	49

D

Desktop holder	10, 12
Disaster Message Board Service	6
Display indicators	18
Display language	22
Domain name	24

E

Earpiece volume	35
Easy Voice Memo	
Delete	37
Playback	37
Turning on	36
E-mail	48
Create New	50
Creating and sending e-mail messages	50
E-mail address	21, 23, 24
E-Mail Setup	55
Initial settings	21
Reading an e-mail message with an attached photo or movie	53
Reading received e-mail messages	52
Replying to a received e-mail message	54
Subject	51
To	50
Using e-mail	48
Extension Mode	107
EZ Navi	78
My Spot	80
Return Home	83
EZweb	70
Bookmarking sites	73
Downloading	74
EZ Password	74
EZ top menu	71
Using EZweb	70
Viewing a bookmarked site	76

G

Getting Ready	10
----------------------------	-----------

H

Hot Buzzer	106
Hot Dial	106

I

Included items	10
Incoming records	30
Initial settings	
A5512CA	16

E-mail and EZweb	21
Inputting characters	98
Inputting an e-mail address	99
Inputting pictographs	100
Inputting preset phrases	100

K

Key functions	17
----------------------------	-----------

M

Mail

C-mail	49
E-mail	48

Mail filter	5, 55
--------------------------	--------------

Main menu	19, 86
------------------------	---------------

Making and answering calls	28
-----------------------------------------	-----------

Answering a call	29
Dialing a person who called you (incoming records)	30
Making a call	28
Missed call notification	29
Redialing a person you called (outgoing records)	30

Manner Mode

Turning on	35
Vibrator	35

Manners	1
----------------------	----------

Movie

Movie Folder	65
Recording a movie	64
Reshooting a movie	65
Sending a movie by e-mail	68
Viewing movies	66

N

Names of parts	11
-----------------------------	-----------

Notify call ID	28
-----------------------------	-----------

O

One-ring calls	5, 31
-----------------------------	--------------

Operation basics	17
-------------------------------	-----------

Other functions	102
------------------------------	------------

Outgoing records	30
-------------------------------	-----------

Own e-mail address

Changing	24
Viewing	23

P

Pair Function	44
----------------------------	-----------

Making a phone call or sending mail to a Pair partner	45
Registering a Pair partner	44

Personal identification numbers and passwords	27
----------------------------------------------------------------	-----------

Photo

Photo Folder	61
Reshooting a photo	61
Sending a photo by e-mail	68
Shooting a photo	60
Viewing photos	62

Playback

Easy Voice Memo	37
Movie	66
Photo	62

R

Redial

From incoming records	30
From outgoing records	30

Remote Auto Lock	104
-------------------------------	------------

S

Signal strength	15
------------------------------	-----------

Site	71, 72, 73, 74, 76
-------------------	---------------------------

Smart Mode	84
-------------------------	-----------

Adding data to the address book	88
Creating and sending e-mail messages	92
Entering Smart Mode	84
Exiting Smart Mode	85
Shooting a photo	95
Using the address book	91
Using the Main Menu	86
Viewing recorded photos	96

Soft keys	20
------------------------	-----------

Spam	5, 55
-------------------	--------------

Standby screen	15
-----------------------------	-----------

T

Teens Mode	46
-------------------------	-----------

Troubleshooting	103
------------------------------	------------

Turning off power	15
--------------------------------	-----------

Turning on power	15
-------------------------------	-----------

U

Unsolicited advertisements	5, 55
-----------------------------------------	--------------

Using Menus	20
--------------------------	-----------

Using Photo Mail	69
-------------------------------	-----------

V

Viewing charges	77
------------------------------	-----------

Viewing your phone number	23
----------------------------------------	-----------

For inquiries, call:

au Customer Service Center (General Information)

From regular phones:

 **0077-7-111**
フリーコール (toll free)

From au cellphones:


157 area code not required
(toll free)

Pressing "zero" will connect you to an operator,
after calling "157" on your au cellphone.



古紙配合率100%再生紙を使用しています



モバイル・リサイクル・ネットワーク
携帯電話・PHSのリサイクルにご協力を。
Cellphone and PHS operators collect and
recycle unused telephones, batteries and
battery chargers at stores bearing the 
logo regardless of brand and
manufacturer to protect the environment
and reuse valuable resources.

Sales: KDDI Corporation

Okinawa Cellular Telephone Company
Manufactured by CASIO COMPUTER CO., LTD.

MN5650YAA-1
July 2005, 1st Edition

auオンラインマニュアル
へのアクセスはこちら

